



3. MAINTENANCE

MAINTENANCE SCHEDULE

REGULAR SCHEDULE

Perform the PRE-RIDE INSPECTION in the Owner's Manual at every maintenance period.

I : Inspect, Clean, Adjust, Lubricate or Replace if Necessary.

C : Clean

R : Replace

A : Adjust

L : Lubricate

ITEM	FREQUENCY	BREAK-IN MAINTENANCE	REGULAR SERVICE INTERVAL
		350 km (200 mi)	1,600 km (1,000 mi)
ENGINE OIL	NOTE	R	R, every 3,000 km (1,800 mi)
* ENGINE OIL FILTER SCREEN			C
AIR CLEANER	NOTE	C	C, every 800 km (500 mi)
* FUEL FILTER AND FUEL LINE		I	I
SPARK PLUG		I	I
* VALVE CLEARANCE		I	I
* STARTER DECOMPRESSOR		I	I
* THROTTLE OPERATION		I	I
* CARBURETOR IDLE SPEED		I	I
* CARBURETOR CHOKE		I	I
** BALANCER CHAIN TENSION		I	A
DRIVE CHAIN	NOTE	I, L	I, L every 500 km (300 mi)
DRIVE CHAIN GUIDE SLIDER		I	I
DRIVE CHAIN SLIDER		I	I
* BRAKE SHOE WEAR			I
BRAKE SYSTEM		I	I
* HEADLIGHT AIM		I	I
CLUTCH FREE PLAY		I	I
* SUSPENSION		I	I
SWINGARM BEARINGS		I, L	I, L
REAR SUSPENSION LINKAGE		I, L	I, L
* REAR SHOCK ABSORBER UPPER BUSHING			I, L
** SPARK ARRESTER			C
* NUTS, BOLTS, FASTENERS	NOTE	I	I
** WHEELS/SPOKES	NOTE	I	I
** STEERING HEAD BEARING		I	I

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS THE PROPER TOOLS AND IS MECHANICALLY QUALIFIED.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

NOTE : Service more frequently when ridden in wet or dusty conditions.