

MAINTENANCE

MAINTENANCE SCHEDULE

REGULAR MAINTENANCE SCHEDULE

Perform the PRE-RIDE INSPECTION in the Owner's Manual at every maintenance period.

I : INSPECT AND CLEAN, ADJUST, LUBRICATE, OR REPLACE IF NECESSARY

C: CLEAN, R: REPLACE, A: ADJUST, L: LUBRICATE

ITEM	FREQUENCY	EVERY	BREAK-IN MAINTENANCE	REGULAR SERVICE INTERVAL	REFER TO PAGE
			First week of operation. (about 200 mi, 350 km)	Every 30 operating days. (about 1000 mi, 1600 km)	
* FUEL LINE				I	3-5
** FUEL STRAINER SCREEN				C	2-6
* THROTTLE OPERATION				I	3-5
AIR CLEANER		NOTE 1		C	3-6
SPARK PLUG				I	3-7
* VALVE CLEARANCE			I	I	3-7
ENGINE OIL			R	R	2-2
ENGINE OIL FILTER			R	R	2-3
* ENGINE OIL STRAINER SCREEN IN DOWN TUBE				C	2-6
* MANUAL DECOMPRESSOR LEVER			I	I	3-8
* CARBURETOR IDLE SPEED			I	I	3-9
DRIVE CHAIN		NOTE 1	I,L	I, L every 10 operating days. (about 300 mi, 500 km)	3-10
DRIVE CHAIN SLIDER			I	I	3-11
BRAKE FLUID		NOTE 2		I	3-12
BRAKE SHOE/PAD WEAR				I	3-12
BRAKE SYSTEM			I	I	3-13
* HEADLIGHT AIM				I	3-14
CLUTCH SYSTEM			I	I	3-14
SIDE STAND				I	3-15
* SUSPENSION				I, L	3-15
* NUTS, BOLTS, FASTENERS			I	I	3-17
** WHEELS/TYRES			I	I	3-17
** STEERING HEAD BEARINGS			I	I	3-17

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS THE PROPER TOOLS AND IS MECHANICALLY QUALIFIED.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

NOTE: 1. Service more frequently when riding in wet or dusty conditions.

2. Replace every 2 years. Replacement requires mechanical skill.