



FRONT WHEEL/SUSPENSION/STEERING

Remove the tripmeter gear retainer.

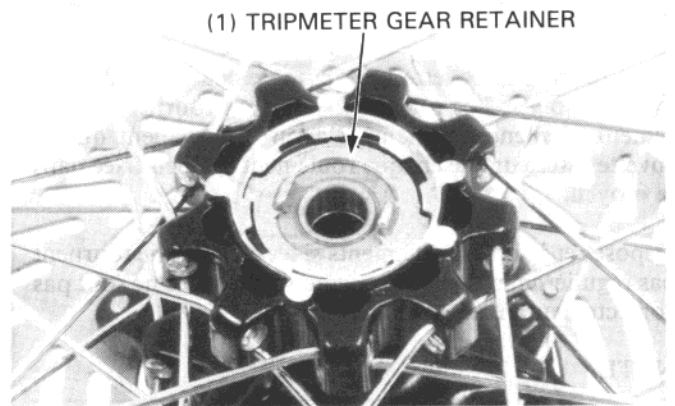

Remove the collar and dust seal.

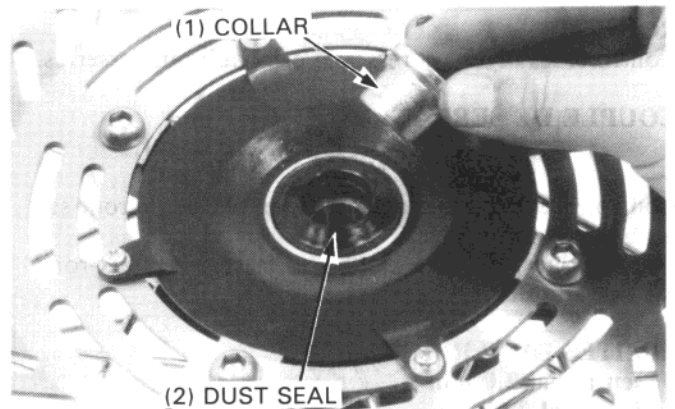


Remove the mounting screws and dust cover.

Remove the mounting nuts and brake disc.

NOTE

- For brake disc inspection, see section 14.

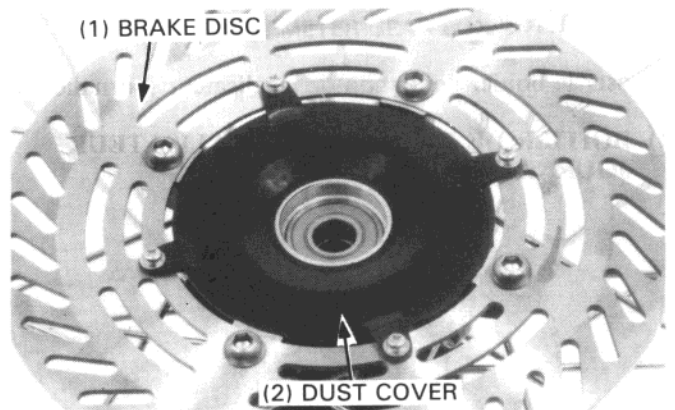

Remove the wheel bearings and distance collar from the wheel hub if necessary.

NOTE

- Never reinstall old bearings: once the bearings have been removed, they must be replaced with new ones.

TOOLS:

BEARING REMOVER SHAFT 07746-0050100
BEARING REMOVER HEAD, 15 mm 07746-0050400

