


FRONT WHEEL/SUSPENSION/STEERING


Install the brake disc onto the wheel hub and tighten the bolts.

TORQUE: 14–16 N·m (1.4–1.6 kg-m, 10–12 ft-lb)


Install the dust cover.

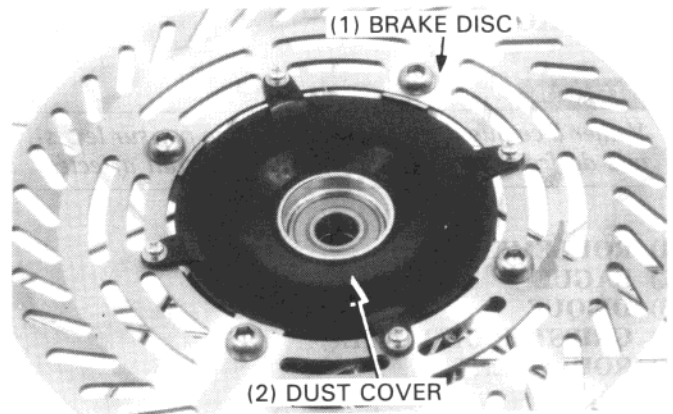

Apply grease to the dust seal lip and install the dust seal.
Install the collar.

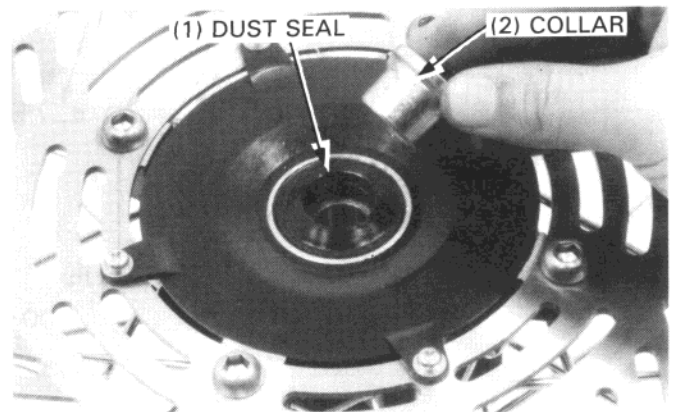

Apply grease to the tripmeter gear retainer.
Install the tripmeter gear retainer into the wheel hub, aligning the tangs with the slots.

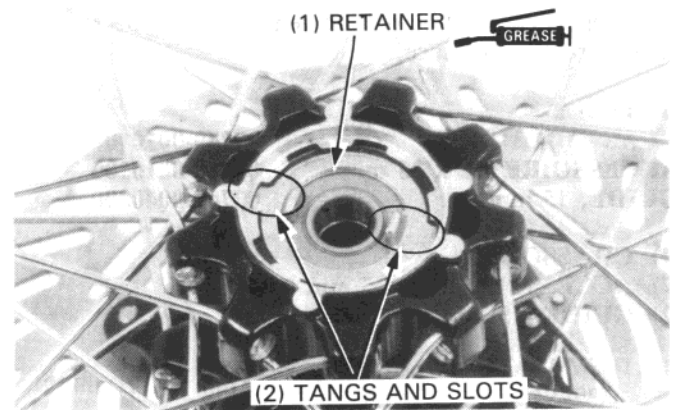

Apply grease to the dust seal lip and install the dust seal.
Apply grease to the tripmeter gear.
Install the tripmeter gearbox into the wheel hub, aligning the tangs with the slots.

Clean the brake disc with a high quality degreasing agent.

