


① Rocker arm ② Camshaft ③ Valve ④ Piston
⑤ Crankshaft ⑥ Cam sprocket ⑦ Camchain
Fig. 10


B. Disassembly

1. Drain the engine oil by removing the drain plug.
2. Unscrew the left crankcase cover mounting screws and remove the cover.

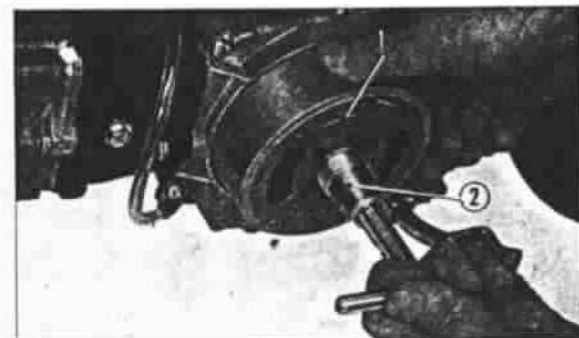

① Flywheel generator ② Flywheel puller
Fig. 11

3. Remove the flywheel using the flywheel puller (Tool No. 07933-0010000) and then remove the stator assembly (Fig. 11).
4. Loosen the 6 mm hex bolt from the left cylinder head side cover and remove the side cover. Also loosen the two cross screws and remove the right cylinder head side cover.

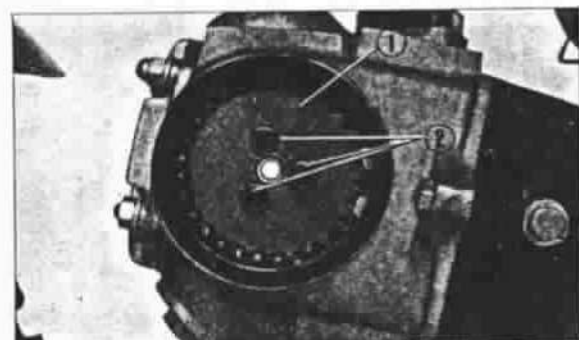

① Cam sprocket ② Sprocket setting bolts
Fig. 12

5. Loosen the three cam sprocket mounting bolts and remove the cam sprocket from the camshaft (Fig. 12).
6. Unscrew the four cylinder head hold-down nuts and 6 mm hex. bolt and then separate the cylinder head from the cylinder.