


7. STEERING SYSTEM

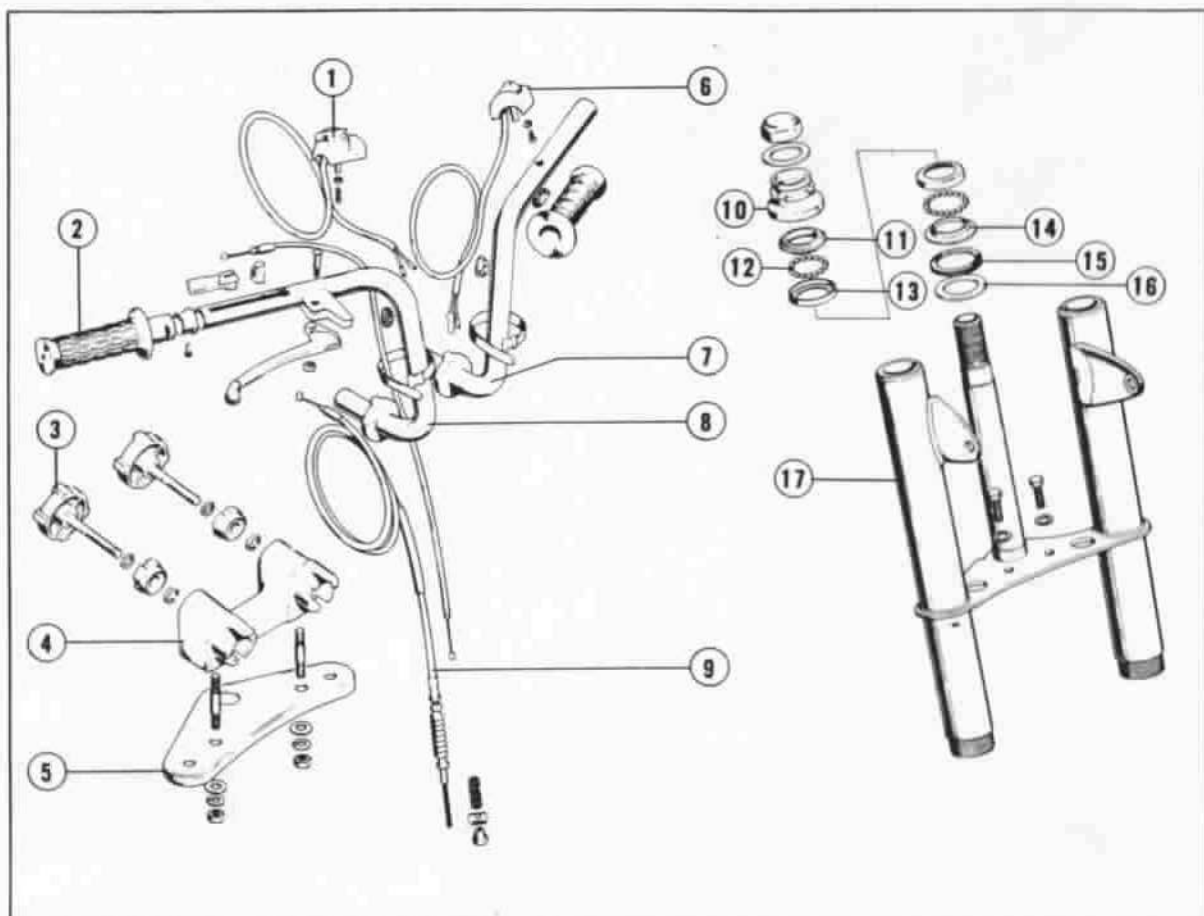

- | | |
|------------------------------|----------------------------------|
| ① Throttle cable | ⑩ Steering head top thread |
| ② Right handle grip A | ⑪ Steering top cone race |
| ③ Handle holder knob | ⑫ #6 steel ball |
| ④ Steering handle holder | ⑬ Steering top ball race |
| ⑤ Fork top bridge | ⑭ Steering bottom cone race |
| ⑥ Lighting switch | ⑮ Steering head dust-seal |
| ⑦ Left steering handle pipe | ⑯ Steering head dust-seal washer |
| ⑧ Right steering handle pipe | ⑰ Front fork |
| ⑨ Front brake cable | |

Fig. 35

A. Disassembly

1. Disconnect the brake cable from the right handlebar.
2. Disconnect the throttle cable from the throttle grip pipe.
3. Remove the headlight and disconnect the wires inside the headlight case.
4. Turn the handlebar holder knobs and remove the handlebar pipes.
5. Remove the front wheel. (See Section 5-A.)
6. Remove the headlight case, front fender, horn handle lock and turn signals.