

## 10. FRAME BODY, SEAT, FUEL TANK AND AIR CLEANER



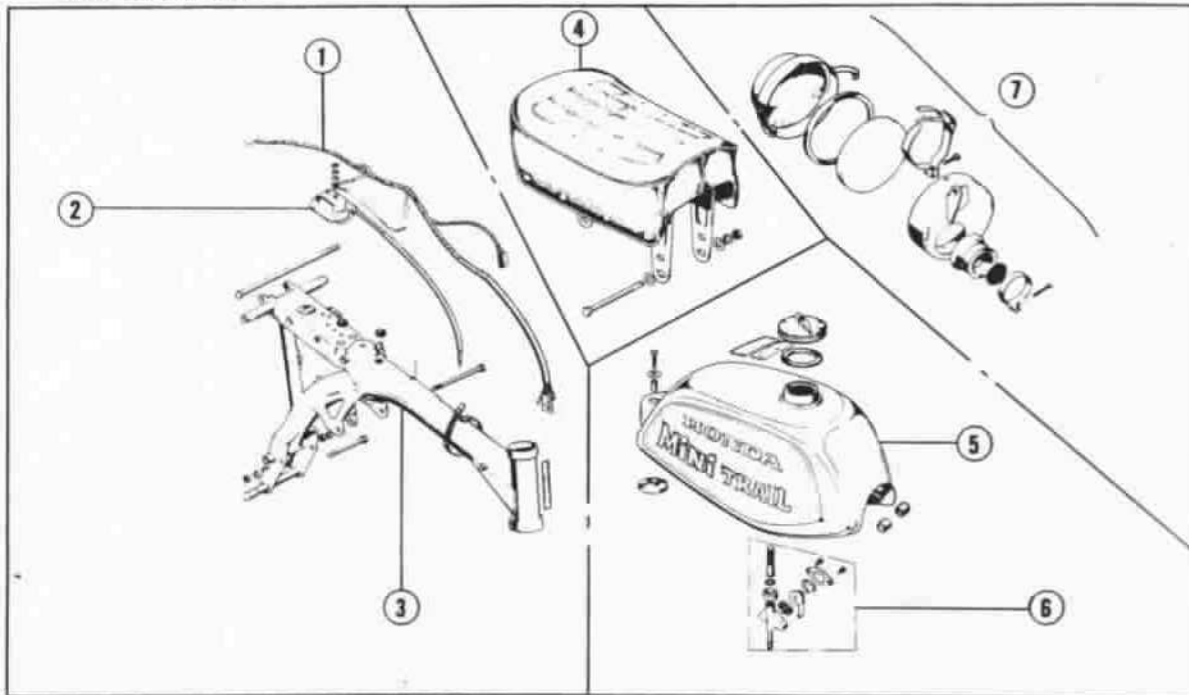


Fig. 48 ① Wire harness ② A.C. ignition coil assy. ③ Frame body ④ Seat ⑤ Fuel tank ⑥ Fuel cock assy. ⑦ Air cleaner assy.

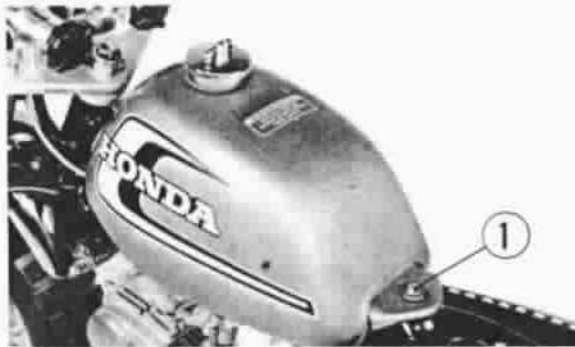

① Setting 6 mm bolt  
Fig. 49

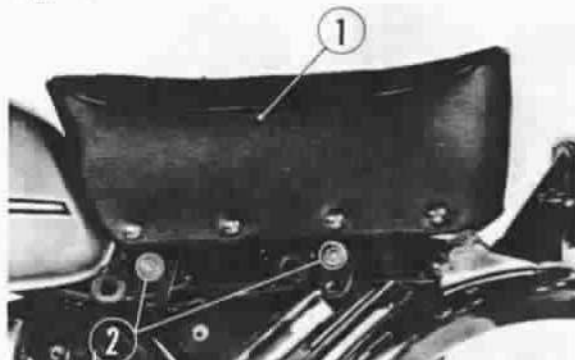

① Seat ② 8 mm bolt  
Fig. 50

## A. Disassembly

1. Remove the engine. (See page 7.)
2. To remove the fuel tank, disconnect the fuel tube by pulling it and remove the 6 mm bolt.
3. To remove the seat, remove the two 8 mm bolts.
4. Remove the front wheel and front shock absorber assemblies. (See Section 5-A.)
5. Remove the rear wheel and rear suspension. (See Section 6-A.)
6. Remove the auxiliary equipment.
7. Remove the electrical parts.