
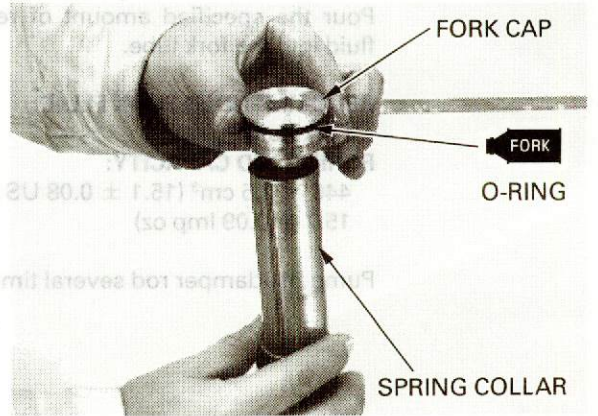


FRONT WHEEL/SUSPENSION/STEERING

Install the spring collar.

Install new O-rings onto the fork cap.
Apply fork fluid to the new O-rings.


Hold the damper rod and screw the fork cap onto the damper rod until it seats on the damper rod lock nut.

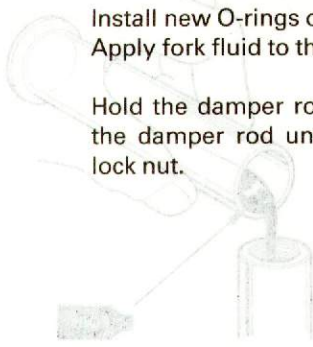



Hold the fork cap and tighten the lock nut to the specified torque.

TORQUE: 20 N·m (2.0 kgf·m, 14 lbf·ft)

184 mm (8.2 in)

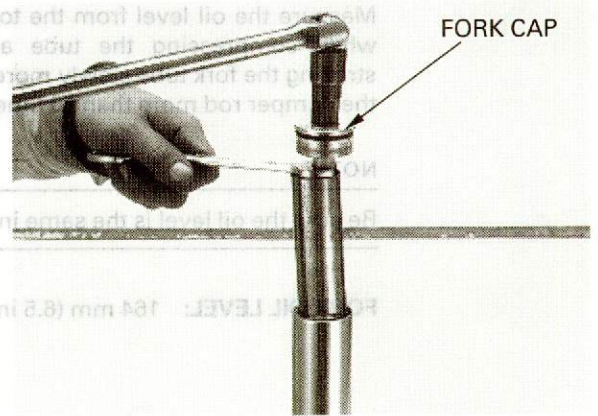

Screw the fork cap into the fork tube.

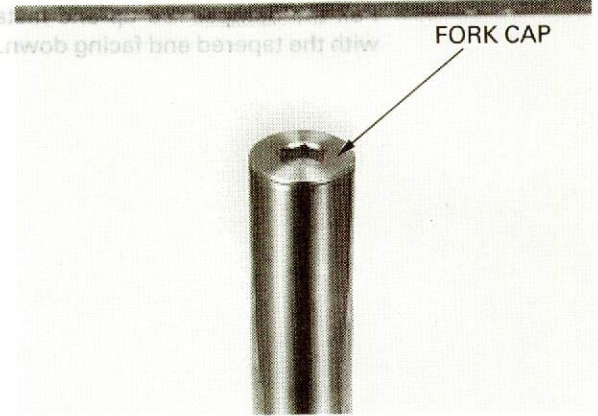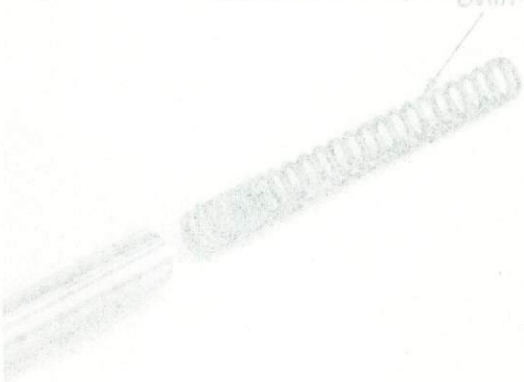

Install the fork protector onto the fork slider aligning the protector boss with the groove in the fork slider.

