


Install the float and float valve in the carburetor body, then install the float pin through the body and float.

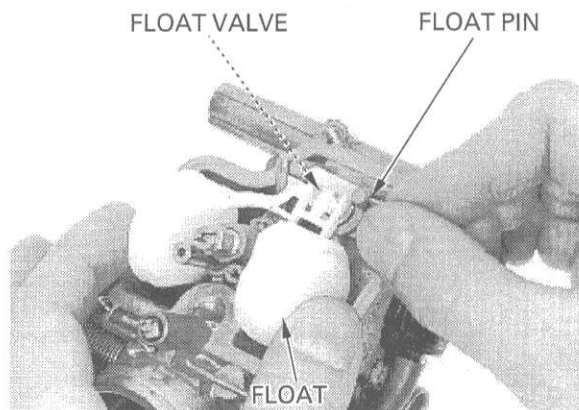

FLOAT LEVEL INSPECTION


With the float valve seated and the float arm just touching the valve, measure the float level with the special tool as shown.

FLOAT LEVEL: 13.7 mm (0.54 in)


TOOL:

Carburetor float level gauge 07401-0010000

The float cannot be adjusted.
Replace the float assembly if the float level is out of specification.

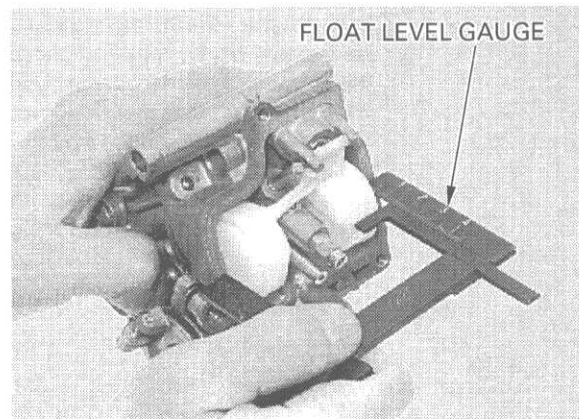

Install a new O-ring in the float chamber.
Install the float chamber.

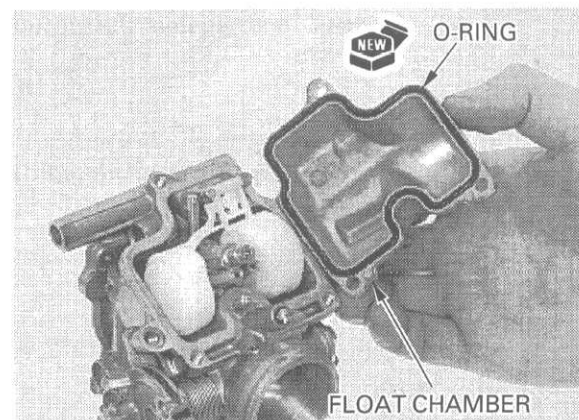

Install and tighten the three float chamber screws.

