# **VALVE LIFTER**

Inspect each valve lifter for scratches or abnormal wear.

Measure the each valve lifter O.D.

**SERVICE LIMIT: 25.97 mm (1.022 in)** 




## **VALVE LIFTER BORE**

Inspect each valve lifter bore for scratches or abnormal wear.

Measure the each valve lifter bore I.D.

**SERVICE LIMIT**: 26.04 mm (1.025 in)

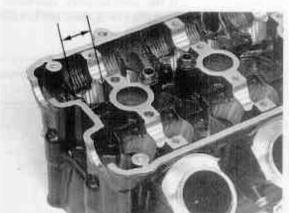


### **VALVE/VALVE GUIDE**

Inspect each valve for bending, burning or abnormal stem wear.

Check valve movement in the guide, measure and record each valve stem O.D.

#### **SERVICE LIMITS:**

**IN**: 4.965 mm (0.1955 in) **EX**: 4.950 mm (0.1949 in)



Insert the reamer from the combustion chamber side of the head and always rotate the reamer clockwise.

#### TOOL:

Valve guide reamer

07984-MA60001

