



FUEL SYSTEM (Programmed Fuel Injection)

Disconnect the fuel return hose at the throttle body.

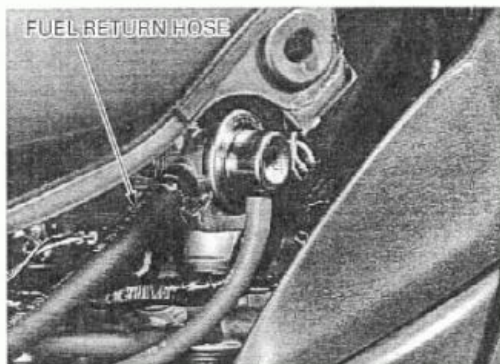

Pull the fuel tank backward and release the front bracket from the frame.

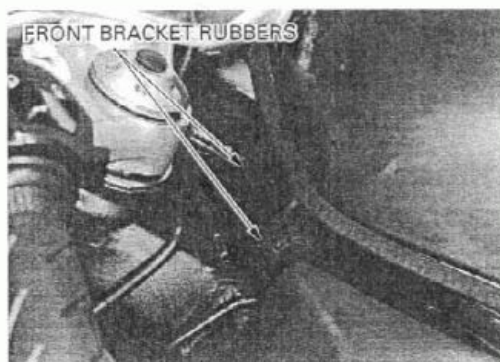

Place the fuel tank upside down.

CAUTION:

Be careful not to damage the fuel tank.

Disconnect the fuel return hose from the fuel pump. Remove the fuel hose banjo bolt and sealing washers, then remove the fuel hose from the fuel pump.

Refer to page 19-27 for fuel level sensor removal.
Refer to page 5-58 for fuel pump removal.

