


ALTERNATOR/STARTER CLUTCH


Install the dowel pins and a new gasket.

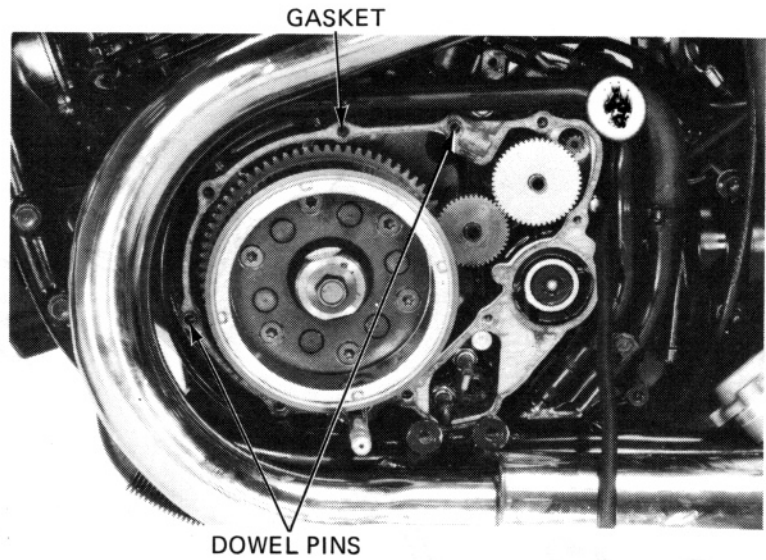

Install the alternator cover.

Install the water pipe protector and tighten the two bolts.

TORQUE: 8–12 N·m (0.8–1.2 kg·m, 6–9 ft·lb)

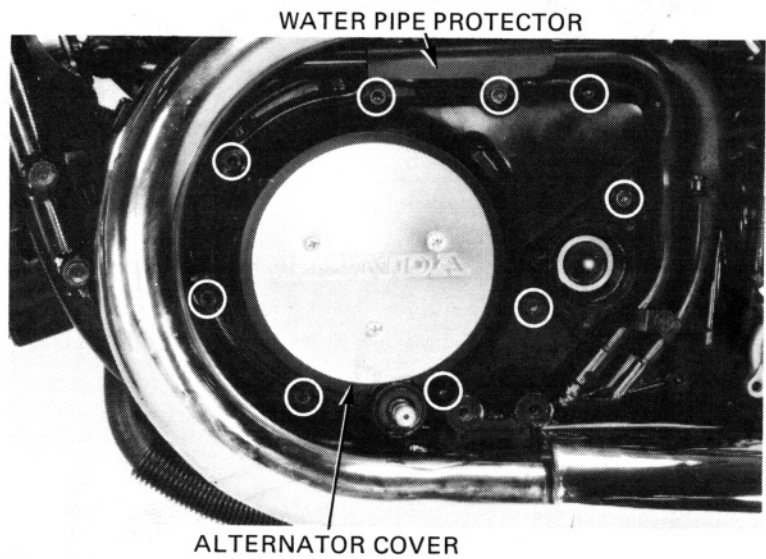

Install the left foot peg and gear shift pedal.

Install the clutch slave cylinder (page 7-10).
Connect the alternator coupler.

Install the seat and frame left side cover.

