



KICK STARTER INSPECTION

Measure the kick starter pinion I.D. and spindle O.D.



KICK STARTER ASSEMBLY


Install the kick starter stopper plate and tighten the bolt.

Upper bolt

TORQUE: 8–12 N·m (0.8–1.2 kg·m, 6–9 ft·lb)

Lower bolt

TORQUE: 22–28 N·m (2.2–2.8 kg·m, 16–20 ft·lb)

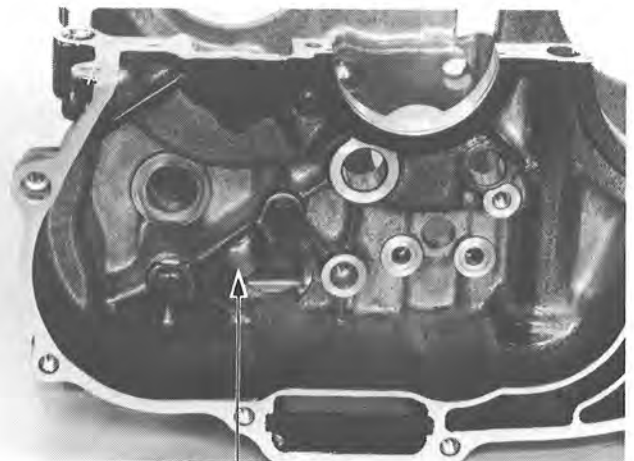

STOPPER PLATE

Install the 24 mm circlip, thrust washer, starter pinion, thrust washer and 22 mm circlip.

Align the ratchet and shaft index marks and install the starter ratchet, ratchet spring and thrust washer.

STARTER RATCHET

