


Rear Suspension

The spring preload adjuster (1) has 7 spring preload positions for different load or riding conditions.

Remove the left side cover (page 72). Use the pin spanner (4) to adjust the rear shock.

Positions 1 to 3 are for a light load and smooth road conditions.

Positions 4 to 7 increase spring preload for a stiffer rear suspension, and can be used when the motorcycle is more heavily loaded.

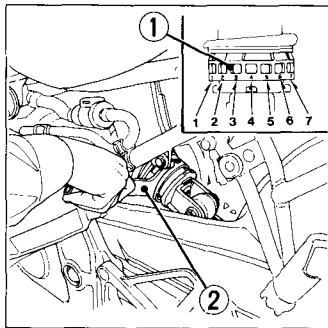

Suspension arrière

Le tendeur du ressort de précharge possède 7 positions de précharge du ressort en vue de conditions de charge et de conduite diverses.

Retirer le cache latéral gauche (page 72). Régler l'amortisseur arrière à l'aide de la clé à griffes. Les positions 1 à 3 correspondent à une charge légère et à des conditions de conduite faciles.

Les positions 4 à 7 augmentent la précharge du ressort afin d'obtenir une suspension arrière plus raide; on les utilisera quand la machine est plus lourdement chargée.