


To replace the main fuse (1), remove the right side cover, disconnect the wire connector (3) of the starter magnetic switch and pull out the old fuse. Install a new fuse and reconnect the connector.

To replace any fuses in the fuse box (4), remove the left upper shroud (5) by removing the screws (6). Then remove the fuse box cover (7) by removing the screws that secure it. Spare fuses (8) are located in the fuse box. Pull the old fuse out of the clips with the fuse remove (9). Push a new fuse into the clips and install the fuse box cover. Tighten the screws. Install the upper shroud and tighten the screws.

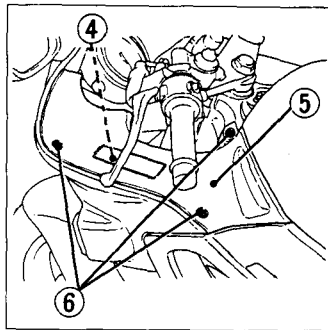

Pour remplacer le fusible principal (1), retirer le cache latéral droit, débrancher le connecteur de fils (3) du commutateur magnétique du démarreur et sortir le vieux fusible. Mettre un fusible neuf en place et rebrancher le connecteur.

Pour remplacer l'un quelconque des fusibles dans la boîte à fusibles (4), ôter le capot supérieur gauche (5) en retirant les vis (6). Puis, retirer le couvercle de la boîte à fusibles (7) en enlevant ses vis de fixation. Les fusibles de rechange (8) se trouvent dans la boîte à fusibles. Sortir le fusible de ses griffes à l'aide d'un extracteur de fusible (9). Enfoncer un fusible neuf dans les griffes et remettre le couvercle de boîte de fusibles en place. Resserrer les vis. Remonter le capot supérieur et resserrer ses vis.

