

## **Headlight Dimmer Switch**

Turn headlight dimmer switch (1) to "Lo" for low beam, and "Hi" for high beam.

## **Turn Signal Switch**


To signal a left turn move the switch (2) to the "L" position. To signal a right turn move the switch (2) to the "R" position.

## **Horn**

When this switch (3) is pressed the horn sounds.

## **Passing Light Control Switch**

When this switch (4) is pressed, the headlight flashes on to signal approaching cars of when passing.

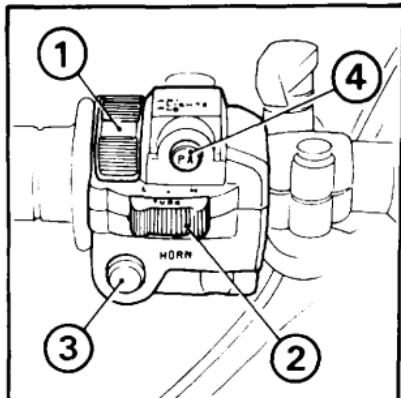

## **Interruptor conmutador del haz del faro**

Coloque el interruptor conmutador del haz del faro (1) en posición "Lo" para obtener el haz bajo, y en posición "Hi" para el alto.

## **Control de señales de direcciones**

Coloque el interruptor (2) en la posición "L" para indicar la vuelta a la izquierda, o en la posición "R" para la vuelta a la derecha.

## **Bocina**

Al oprimir este interruptor (3), sonará la bocina.

## **Interruptor de mando de la luz de paso**

Al oprimir este interruptor(4), el faro ilumina para dar indicaciones a vehículos o para pasar.