


Rear Wheel Removal

1. Place the motorcycle on its center stand.
2. Remove the rear mud guard (1) by removing screws (2).
3. Remove the rear brake adjusting nut (3) and disconnect the brake rod (4) from the brake arm (5).
4. Disconnect the stopper arm (6) from the brake panel (7) by removing the cotter pin (8), stopper arm nut (9), washer (10) and rubber grommet.

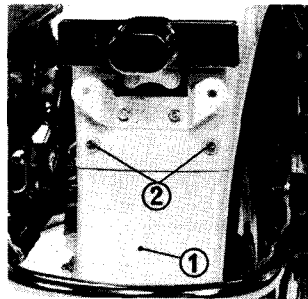

Dépose de la roue arrière

1. Placer la motocyclette sur sa béquille centrale.
2. Déposer le garde-boue arrière (1) en retirant les vis (2).
3. Déposer l'écrou de réglage de frein arrière (3) et déconnecter la tige de frein (4) de la biellette de frein (5).
4. Déconnecter la biellette de butée (6) du flasque de frein (7) en retirant la goupille de clavette (8), l'écrou de biellette de butée (9), la rondelle (10) et la rondelle isolante en caoutchouc.

