

## Ignition Switch


The ignition switch is located directly below the indicator panel.

**OFF:** All electric circuits open. Engine cannot be started. Key can be removed. (G, SD: Key can't be removed)

**ON:** All electric circuits closed. Engine and light can be operated. Key cannot be removed.

**P (PARKING):** All electric circuits open except for taillight and position light. Key can be removed.

**LOCK (STEERING LOCK):** See page 76

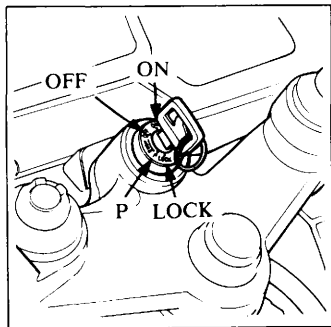

## Commutateur d'allumage

Le commutateur d'allumage se trouve directement sous le tableau d'indicateurs.

**OFF:** Tous les circuits électriques sont ouverts. Le moteur ne peut pas démarrer. La clé peut être retirée. (G, SD: La clé ne peut pas être retirée)

**ON:** Tous les circuits électriques sont fermés. Le moteur et les feux peuvent fonctionner. La clé ne peut pas être retirée.

**P (PARKING):** Tous les circuits électriques sont ouverts, sauf ceux pour le feu arrière et le feu de position. La clé peut être retirée.

**LOCK (VERROUILLAGE DU GUIDON):** Voir page 76.