


## Spark Plugs

1. Remove the right and left side covers to remove the spark plug from the rear cylinder (page 46).
2. Remove the spark plug cap from the spark plug, and remove the spark plug using the special plug wrench furnished in the tool kit.
3. To remove the plug from the front cylinder, unscrew the two bolts attaching the bottom of the radiator.
4. Raise the radiator and remove the spark plug with the plug wrench.

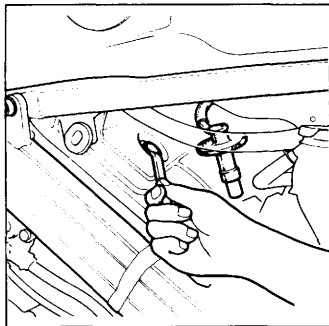

## Bougies d'allumage

1. Retirer les caches latéraux droit et gauche pour déposer la bougie d'allumage du cylindre arrière (page 46).
2. Déposer le capuchon de bougie d'allumage de la bougie d'allumage et retirer la bougie en utilisant la clé à bougie spéciale fournie dans la trousse à outils.
3. Pour retirer la bougie d'allumage du cylindre avant, dévisser les deux boulons fixant le bas du radiateur.
4. Soulever le radiateur et retirer la bougie d'allumage avec la clé à bougie.

