


## Air Cleaner Servicing

The air cleaner should be serviced at regular intervals (page 102).

1. Turn the fuel valve to OFF. Remove the seat (page 74).
2. Remove the two bolts (1) from the front and rear tank mounts. Raise the tank and disconnect the fuel line (2) and wire connectors (3) under the tank.
3. Remove the tank.
4. Remove the air cleaner cover (5) by removing the screws (4).

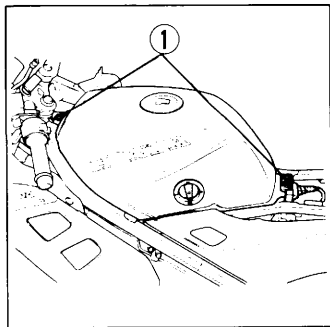

## Entretien du filtre à air

Le filtre à air doit être entretenu à des intervalles réguliers (page 104).

1. Tourner le robinet d'essence sur la position OFF. Déposer la selle (page 74).
2. Déposer les deux boulons (1) des montures avant et arrière du réservoir. Soulever le réservoir et déconnecter la conduite d'alimentation (2) et les connecteurs de fils (3) sous le réservoir.
3. Déposer le réservoir.
4. Déposer le couvercle du filtre à air (5) en retirant les vis (4).

