



INSTALLATION

Install the shock absorbers.

TORQUE:

UPPER MOUNT BOLT:


2.5–3.5 kg-m (18–25 ft-lb)

SUSPENSION ARM PIVOT NUT:

1.0–2.0 kg-m (7–14 ft-lb)


Install the rebound stoppers.

TORQUE: 2.0–3.0 kg-m (14–22 ft-lb)

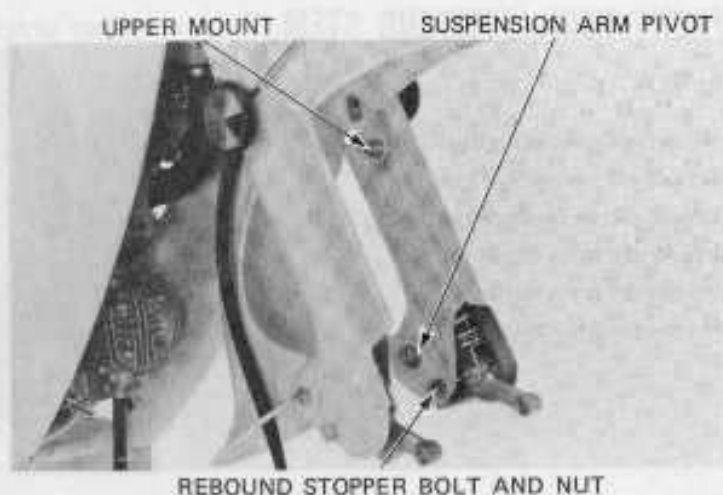

NOTE

Position the rebound stopper as shown.

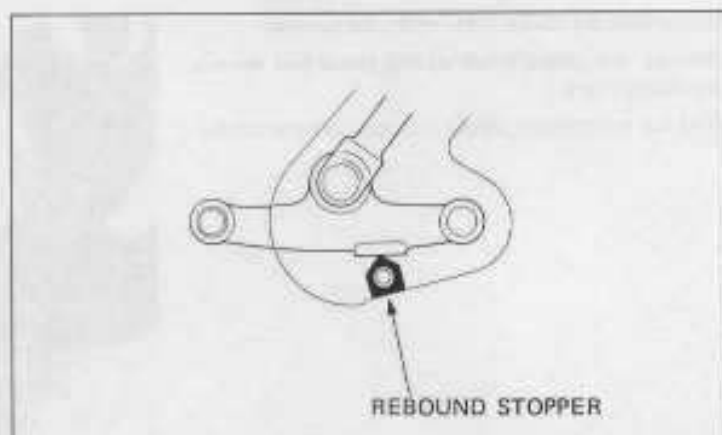

Install the front wheel (page 12-12).

Lubricate the suspension arm pivots.

