


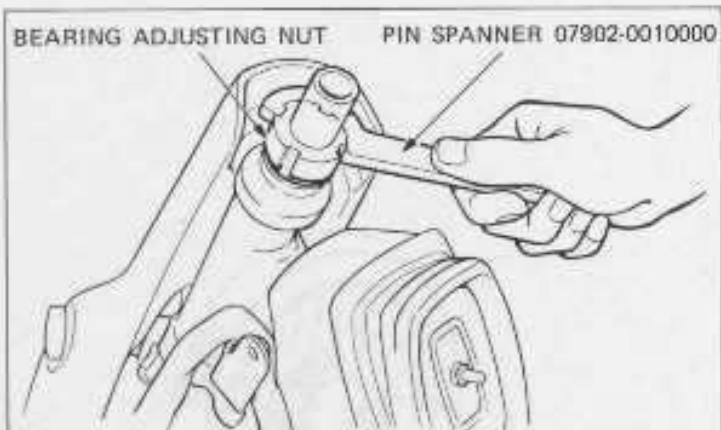

Tighten the adjusting nut until snug against the upper cone race.

Then, loosen it 1/8 turn.

Check that there is no vertical movement and that the stem rotates freely.



Install the handlebar lower cover, top bridge mounts and top bridge.

Tighten the steering stem nut.

**TORQUE: 6.0–9.0 kg-m (43–65 ft-lb)**

LOCK NUT WRENCH, 26 x 30 mm  
EXTENSION BAR



Install the top bridge mount bolts.

Route the speedometer, choke and throttle cables (page 1-6).

Install the front upper cover, front carrier and front fender.

Install the following:

- Handlebar (page 12-6)
- Front wheel (page 12-12)
- Headlight (page 12-3)

