





### ASSEMBLY

Install the spring with the tight coils at the top.

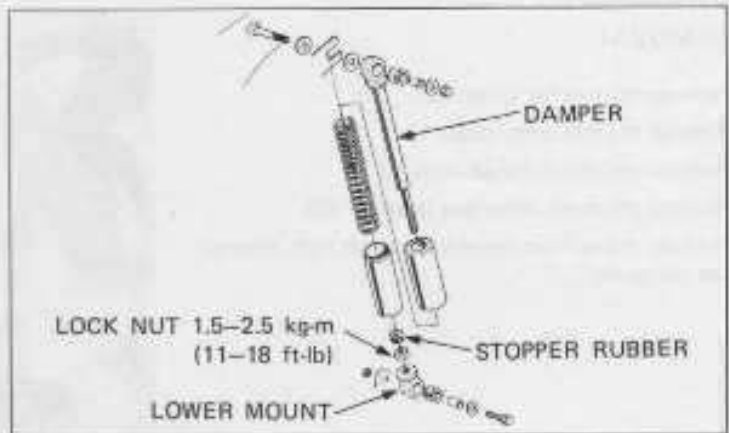

Apply a locking agent to the lock nut and install it.  
Tighten the lock nut.

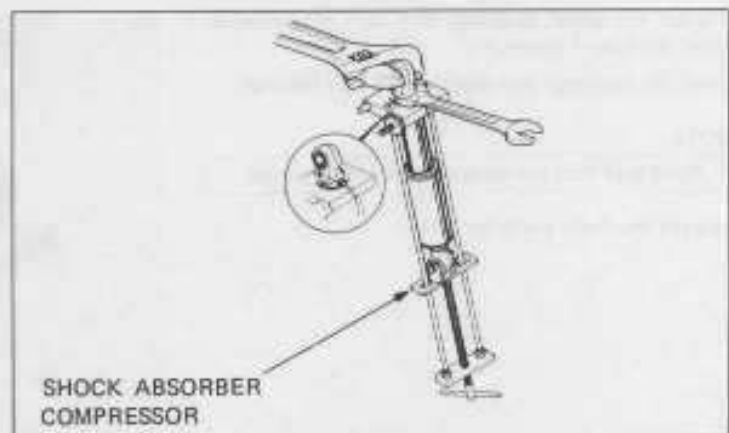

### INSTALLATION

Tighten the shock absorber bolts and nuts.

**TORQUE: 2.0-3.0 kg-m (14-22 ft-lb)**

Check shock absorber operation after installation.

