


## CYLINDER HEAD/VALVES



At the exhaust cam sprocket installation, align the cam pulse generator rotor line with the cam sprocket "EX" mark.

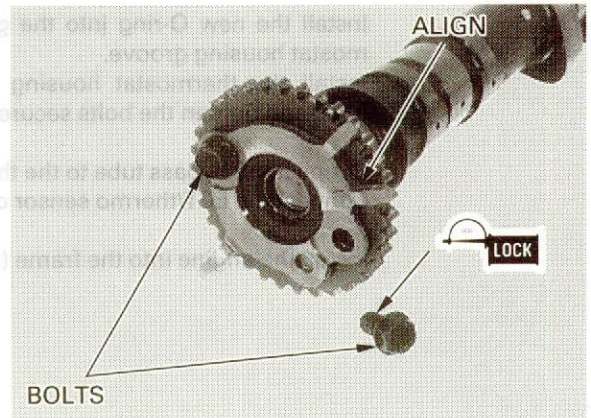

Turn the crankshaft clockwise and align the "T" mark on the ignition pulse generator rotor with the index mark on the ignition pulse generator rotor cover.



Apply molybdenum disulfide oil to the camshaft journals of the cylinder head and camshaft holder.

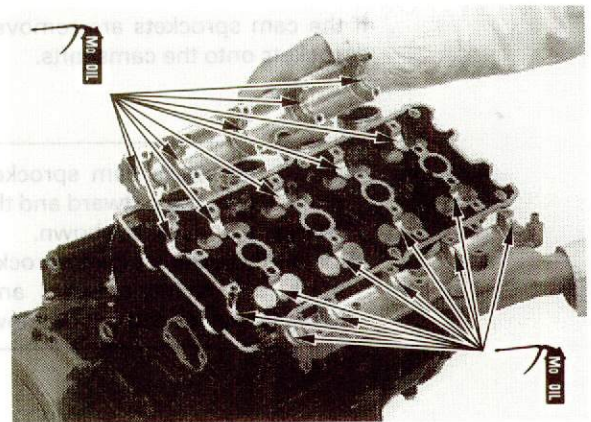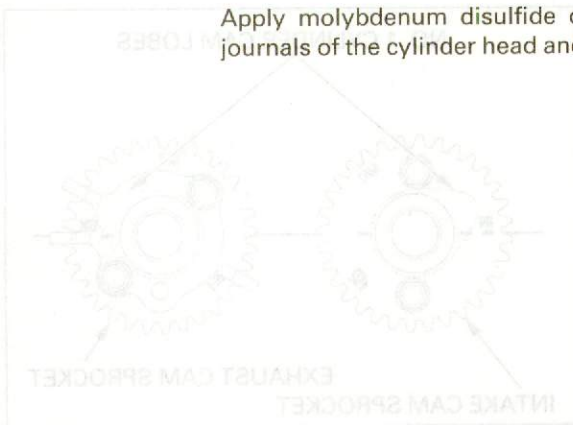

Install the cam chain over the cam sprockets and then install the intake and exhaust camshafts.

### NOTE:

- Install the each camshaft to the correct locations with the identification marks.  
"IN": Intake camshaft  
"EX": Exhaust camshaft
- Make sure that the timing marks on the cam sprockets are facing outward and flush with the cylinder head upper surface as shown.

