



INSTALLATION

Install the fork leg into the bottom bridge, temporarily tighten the bottom pinch bolt. Tighten the fork cap (if it was removed).

TORQUE: 23 N·m (2.3 kgf·m , 17 lbf·ft)

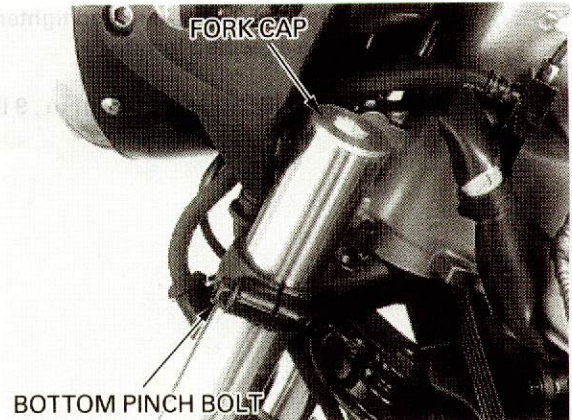

Loosen the bottom pinch bolt and pull up the fork legs into the top bridge. Position the top end of the fork tube flash with the upper surface of the top bridge as shown.

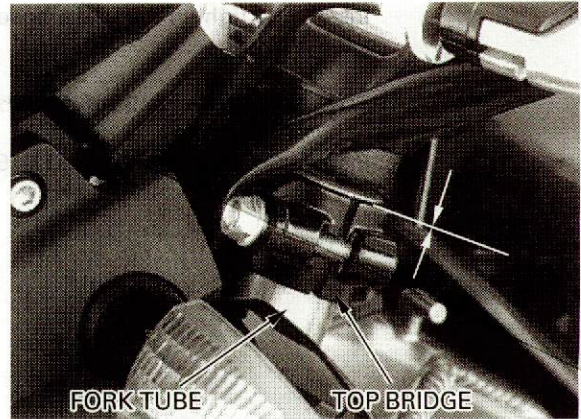


Tighten the bottom bridge pinch bolt to the specified torque.

TORQUE: 49 N·m (5.0 kgf·m , 36 lbf·ft)

Tighten the top bridge pinch bolt to the specified torque.

TORQUE: 23 N·m (2.3 kgf·m , 17 lbf·ft)

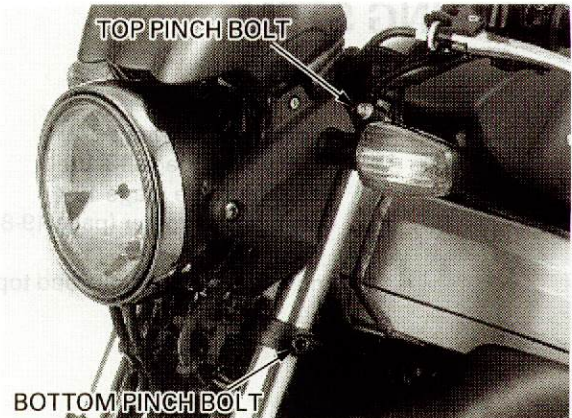

Install the delay valve onto the right fork leg and tighten the mounting bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m , 9 lbf·ft)

