

## FRONT WHEEL/SUSPENSION/STEERING

Install the 3-way joint and tighten the mounting bolt to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

3-WAY JOINT MOUNTING BOLT




Install and tighten the brake hose clamp bolt to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

Install the front wheel (page 13-15).

CLAMP BOLT

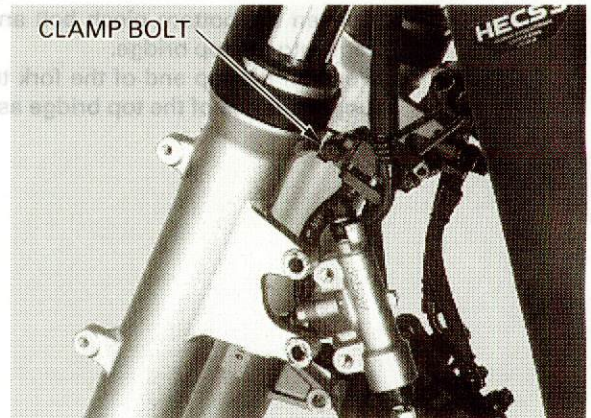


## STEERING STEM

### REMOVAL

Remove the following:

- Front wheel (page 13-10)
- Headlight case (page 19-4)
- Combination meter (page 19-8)

Remove the special bolts and top bridge cover.

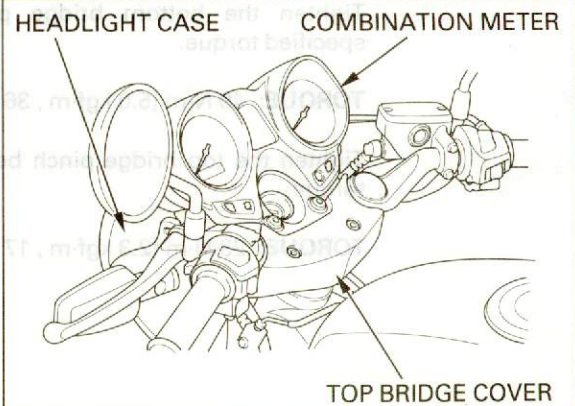

Remove the bolt and headlight case stay.

BOLT

HEADLIGHT CASE STAY

