



Route the brake hose properly, tighten the brake hose guide bolts to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

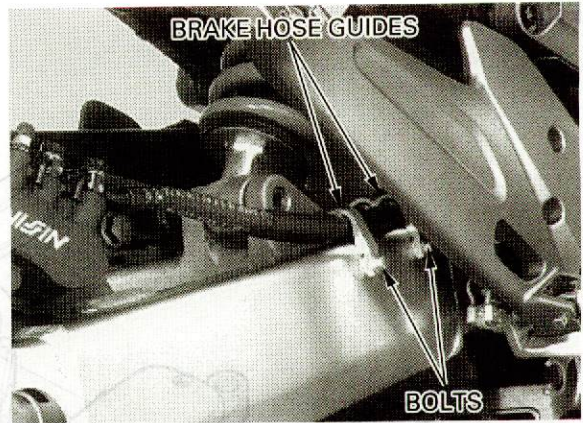

Install the drive chain case and tighten the SH bolt and special bolt.

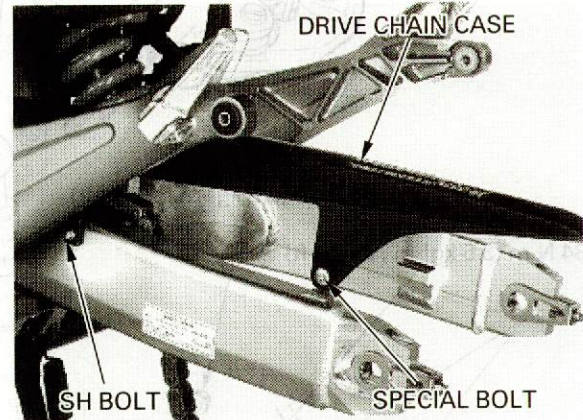

Install the following:

- Muffler (page 2-13)
- Rear wheel (page 14-8)

