


Install the brake hose eyelet with the oil bolt and new sealing washers.  
Tighten the oil bolts to the specified torque.

**TORQUE:** 34 N·m (3.5 kgf·m , 25 lbf·ft)

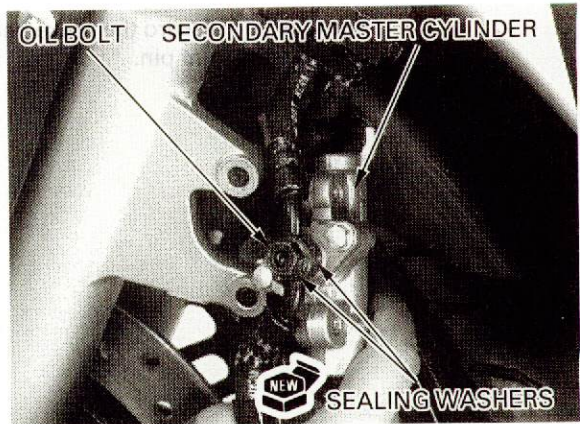


Place the secondary master cylinder onto the fork leg, then tighten the new mounting bolts.

**TORQUE:** 31 N·m (3.2 kgf·m , 23 lbf·ft)

Install and tighten the new left front brake caliper joint bolt to the specified torque.


**TORQUE:** 26 N·m (2.7 kgf·m , 20 lbf·ft)

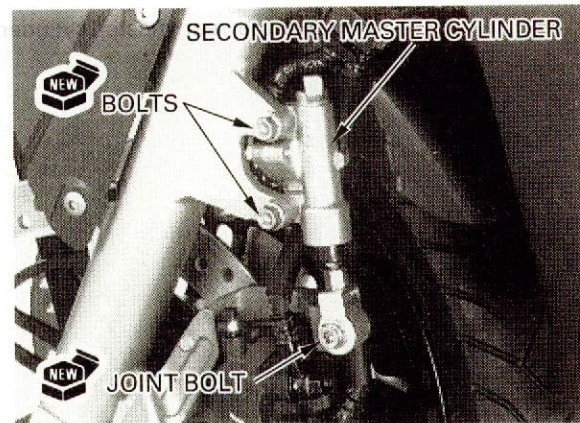

Install the brake hose with the oil bolt and new sealing washers.  
Push the eyelet joint against the stopper, then tighten the oil bolt to the specified torque.

**TORQUE:** 34 N·m (3.5 kgf·m , 25 lbf·ft)

Bleed the air from pedal brake line (page 15-7).

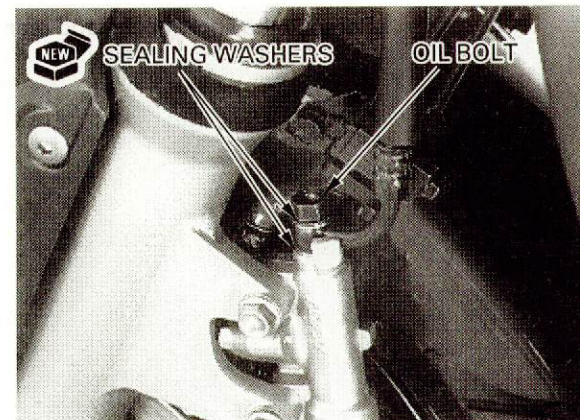

## REAR MASTER CYLINDER

### REMOVAL

Drain the pedal brake hydraulic system (page 15-5).

Remove the brake hose oil bolt, sealing washers and brake hose eyelet joints.

#### CAUTION:

*Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.*

