



INSTALLATION

Install the combination meter assembly onto the lower mounting grommet while aligning the front panel grooves with the grommets.

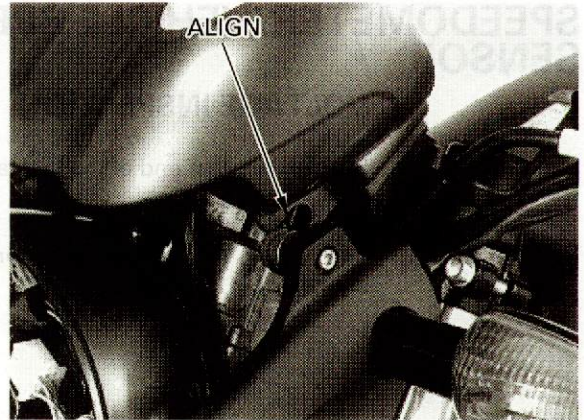


Install and tighten the combination meter upper mounting bolts to the specified torque.

TORQUE: 2 N·m (0.2 kgf·m , 1.4 lbf·ft)

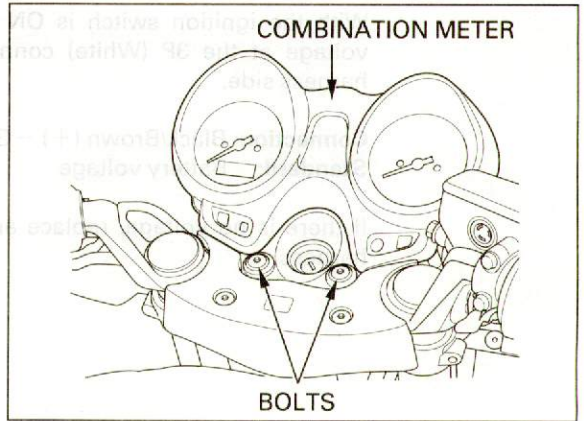

Tighten the lower mounting socket bolts and nuts.

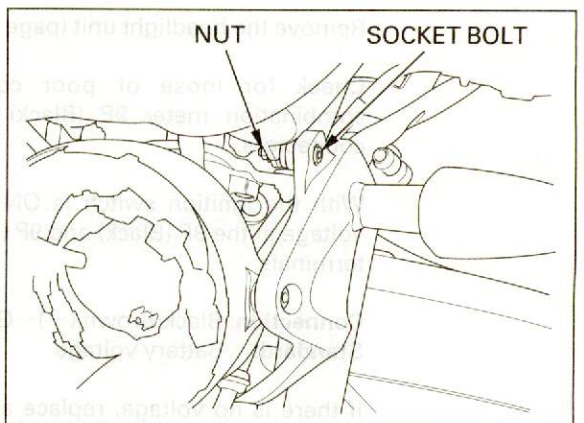

Connect the combination meter 9P (Black) and 9P (Natural) connectors.

NOTE:

Route the combination meter wire properly (page 1-24).

