



CRANKCASE/PISTON/CYLINDER

Route the engine sub-harness, install the oil pressure switch terminal to the switch. Tighten the oil pressure switch terminal screw to the specified torque.

TORQUE: 2 N·m (0.2 kgf·m , 1.4 lbf·ft)

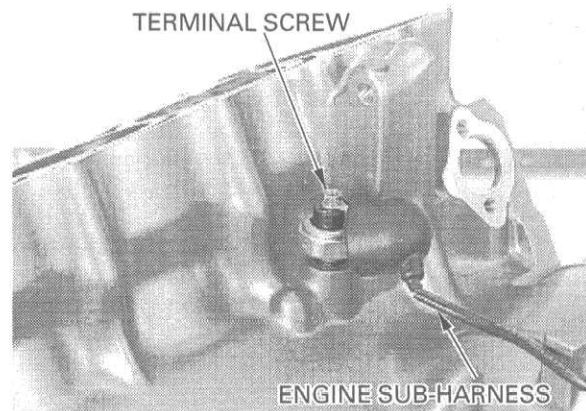

Install the neutral switch connector.

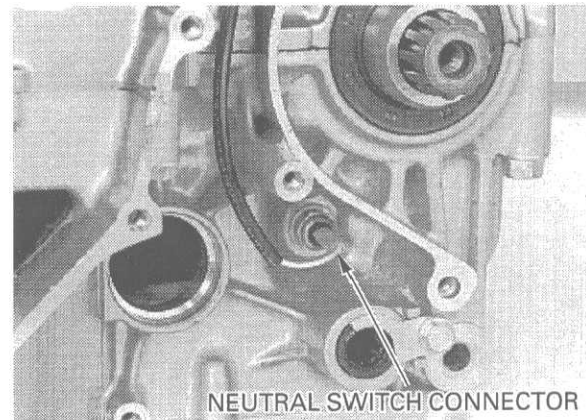

Install the cam chain drive sprocket aligning its wide groove with the wide teeth of the crankshaft. Install the cam chain through the crankcase.

Install the cam chain guide, collar and bolt.

Install the removed parts in the reverse order of removal.

