


INSTALLATION

Install the shock absorber into the frame.

Install and tighten the upper mounting bolts/nuts to the specified torque.

TORQUE: 37 N·m (3.8 kgf·m , 27 lbf·ft)

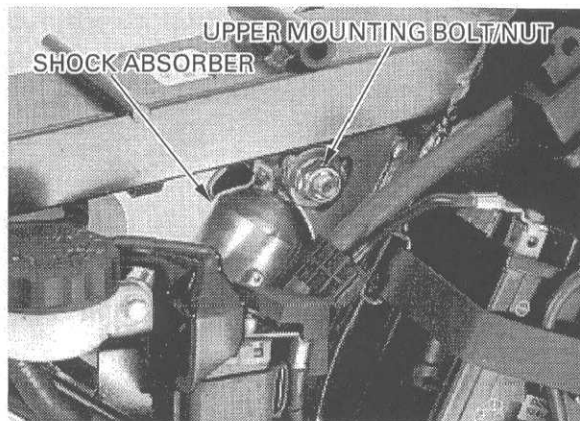

Install and tighten the lower mounting bolts/nuts to the specified torque.

TORQUE: 37 N·m (3.8 kgf·m , 27 lbf·ft)

Install the removed parts in the reverse order of removal.



SWINGARM

REMOVAL

Support the motorcycle securely using a hoist or equivalent.

Remove the rear wheel (page 14-3).

Remove the shock absorber lower mounting bolt/nut.



Remove the two brake hose clamp bolts.

