


## REAR WHEEL/SUSPENSION

Install the gearshift pedal link to the spindle aligning its slit with the punch mark on the spindle. Tighten the pinch bolt.

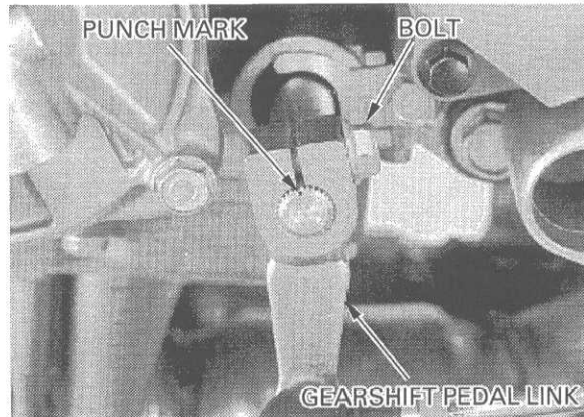

Install the shock absorber lower mounting bolt/nut, tighten the nut to the specified torque.

**TORQUE:** 37 N·m (3.8 kgf·m , 27 lbf·ft)



Route the brake hose properly, tighten the brake hose clamp bolts.

Install the rear wheel (page 14-9).

