



CARBURETOR ASSEMBLY

Install new O-rings onto the fuel joint and air pipes.


NOTE

Apply a thin coating of oil to the O-rings.


Install the front bracket loosely.

Place the carburetors on a flat surface with the front side up.

Press the carburetors together carefully and evenly tighten the screws in the sequence shown in two or more steps to prevent carburetor misalignment.

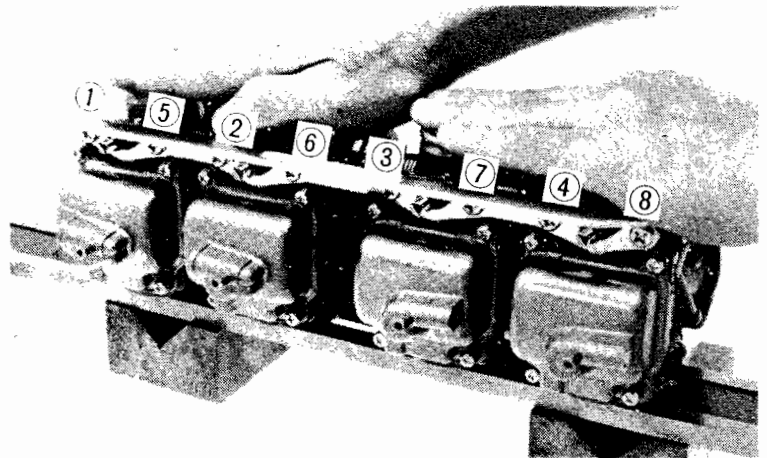

Install the rear bracket using the same procedure as for the front bracket with the rear side up.

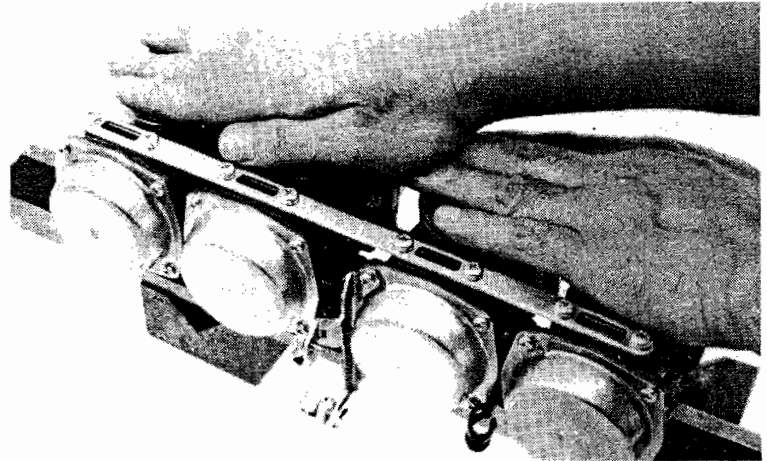

Install the choke (bystarter) arms onto the valves. Carefully insert the choke shaft through the arms from the left side.

Tighten the screws securely and hook the choke (bystarter) relief spring. Check the choke shaft for smooth operation.

