





Install the rocker arms.
Install the rocker arm holders and tighten the bolts.

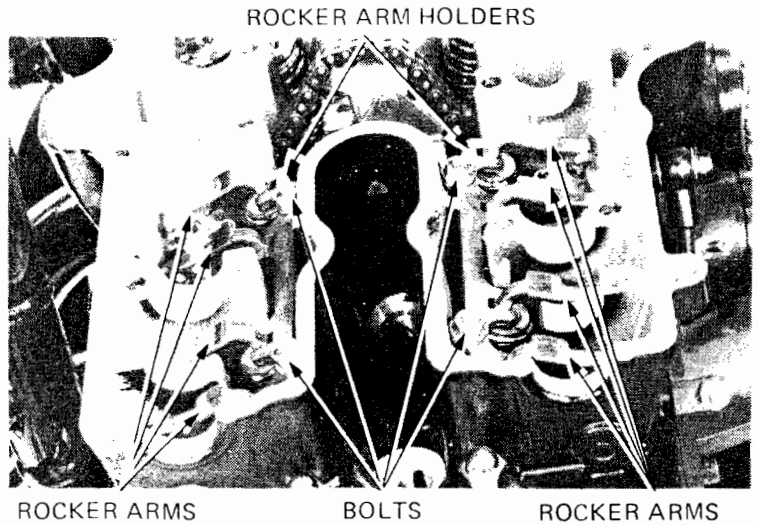

CAMSHAFT INSTALLATION

Remove the pulse generator cover.
Turn the crankshaft counterclockwise and align the "T" mark on the pulse rotor with the index mark on the crankcase.

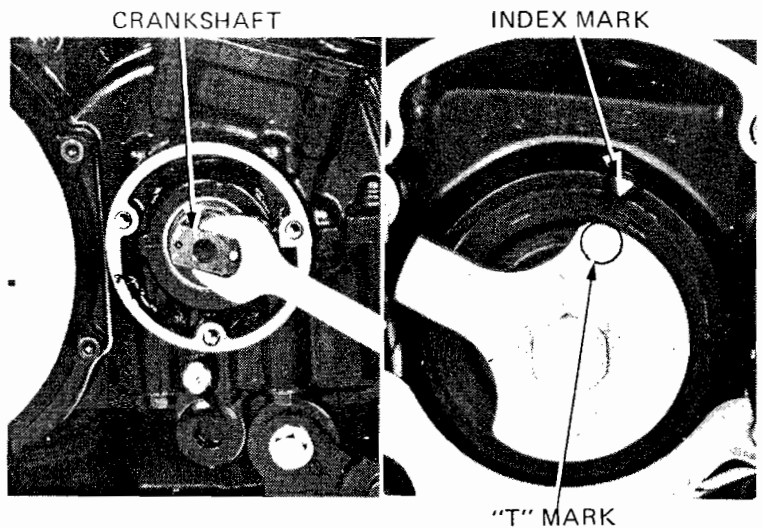

Lubricate the camshaft bearings with molybdenum disulfide grease.
Position the cam sprockets onto the camshaft with the timing marks facing out.
Place the intake and exhaust camshaft onto the cylinder head with the No. 1 cam lobes facing up as shown.

NOTE

The camshaft has an "IN" mark for intake, or an "EX" mark for exhaust.

