


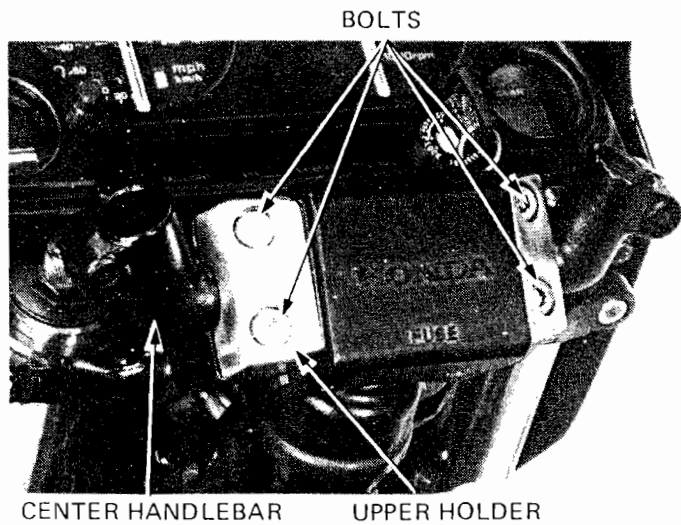


Remove the handlebar upper holder bolt caps and bolts.  
Remove the handlebar upper holder and center handlebar.



**INSTALLATION**

Place the center handlebar onto the lower holders aligning the dowel pin with the hole in the handlebar lower holder.

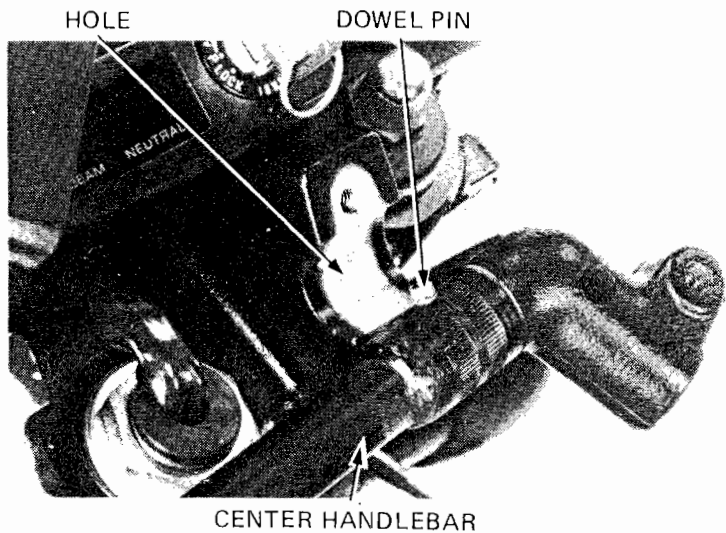

Align the punch mark on the center handlebar with the upper surface of the lower holder.

