



Install the clutch master cylinder and holder with holder "UP" mark facing up. Align the end of the holder with the punch mark on the handlebar. Tighten the upper bolt first, then the lower bolt.

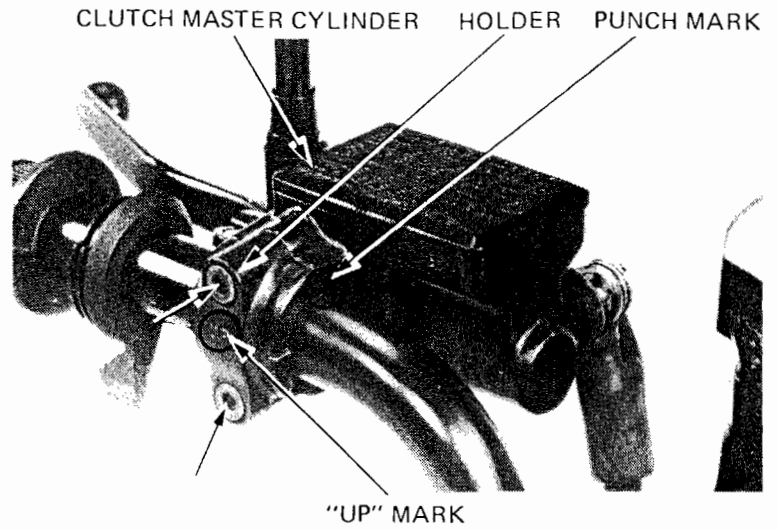

Apply grease to the sliding surface on the choke lever and connect the choke cable to the lever.

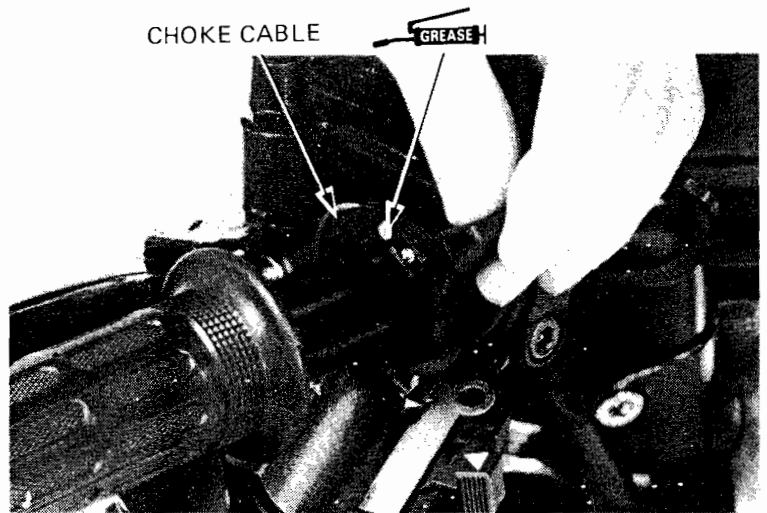

Align the left switch locating pin with the hole in the handlebar and install the left switch.

