





REAR BRAKE LINKAGE INSTALLATION

Install the brake rod and return spring onto the brake pedal shaft.
Apply grease to the brake pedal shaft and insert it into the frame.

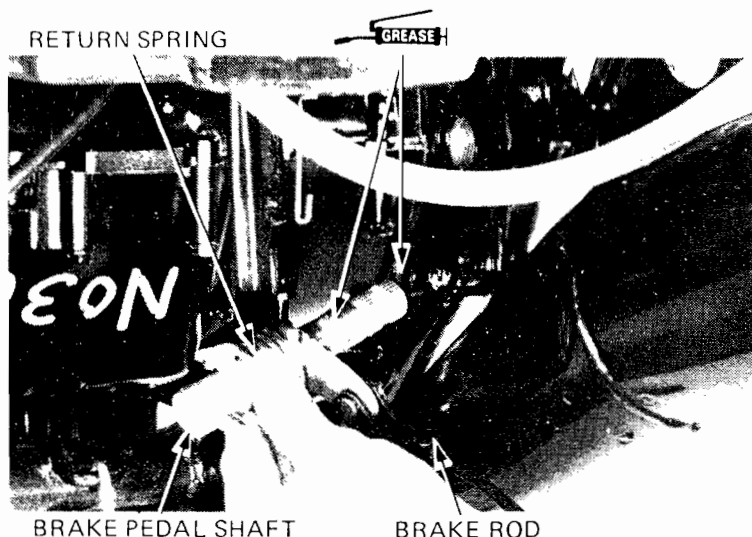

Rest the return spring end on the frame as shown. Hook the brake light switch spring to the return spring. Install the swing arm (Page 15-18) and rear wheel (Page 15-6).

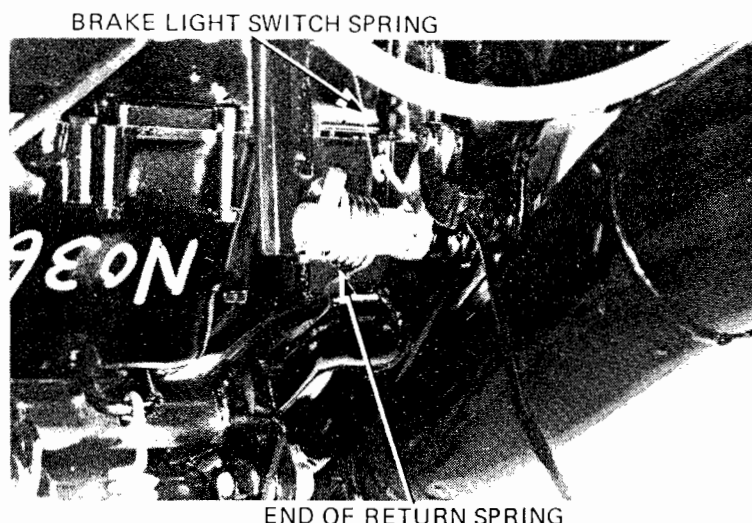

Install the brake pedal over the pedal shaft aligning the punch marks.
Tighten the brake pedal bolt.

TORQUE: 20–28 N·m
(2.0–2.8 kg·m, 14–20 ft·lb)

Install the right footpeg and tighten the socket bolt.

TORQUE: 30–40 N·m
(3.0–4.0 kg·m, 22–29 ft·lb)

