


INSTALLATION

Install the side collars.



Install the front wheel between the fork legs.

Apply a thin layer of grease to the front axle surface.
Install the front axle from the left side.

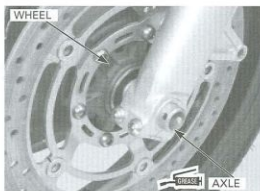


Hold the axle and tighten the axle bolt to the specified torque.

TORQUE: 59 N·m (6.0 kgf·m, 43 lbf·ft)

Tighten the right axle pinch bolts to the specified torque.

TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)

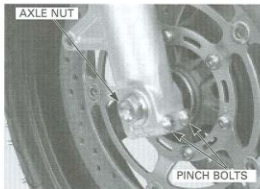

Install both brake calipers and tighten the new mounting bolts to the specified torque.

TORQUE: 30 N·m (3.1 kgf·m 22 lbf·ft)

