



Install the delay valve and reflector onto the right fork leg and tighten the mounting bolts to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

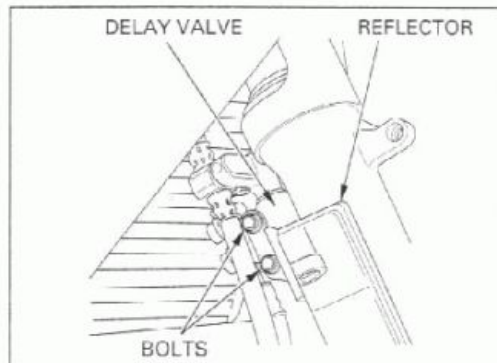

Install the 3-way joint and tighten the mounting bolt to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

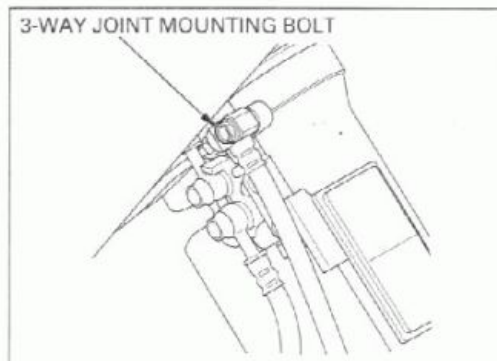

Install and tighten the brake hose clamp bolt to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

Install the front wheel (page 13-14).



## STEERING STEM

### REMOVAL

Remove the front wheel (page 13-9).

Remove the bolts and front brake hose/horn mounting bracket.

