


Install the master cylinder and mounting bolts.


Install the brake pedal joint and secure it with a new cotter pin.

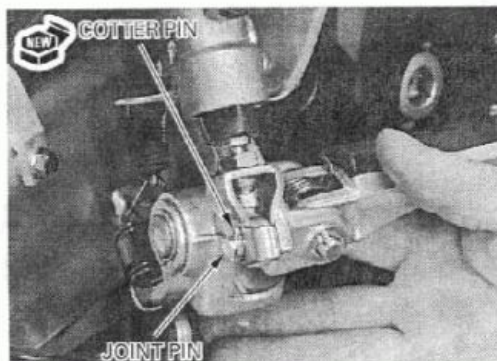

Install the right footpeg assembly onto the frame. Install and tighten the right main footpeg holder socket bolts to the specified torque.

**TORQUE:** 26 N·m (2.7 kgf·m , 20 lbf·ft)

Install and tighten the exhaust pipe mounting nut.

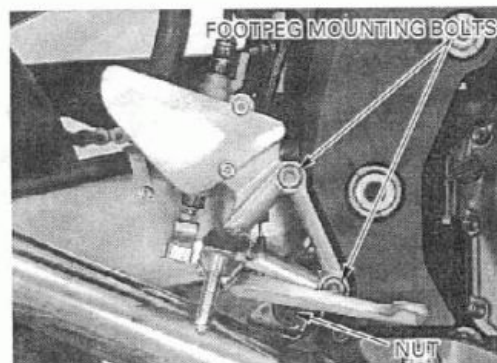

Tighten the rear master cylinder mounting bolts to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

