


## FRAME/BODY PANELS/EXHAUST SYSTEM


Tighten the muffler band flange bolts to the specified torque.

**TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)**

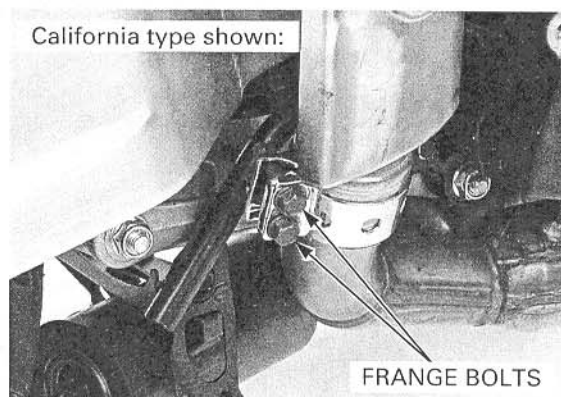


Install the rear fender B and four bolts.

Connect the turn signal light and license light connectors.

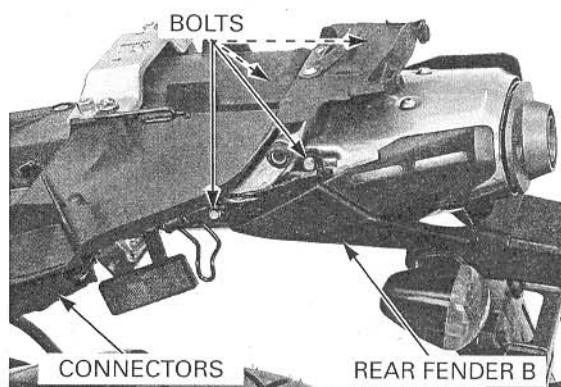

Install the right footpeg bracket and tighten the socket bolts to the specified torque.

**TORQUE: 37 N·m (3.8 kgf·m, 28 lbf·ft)**

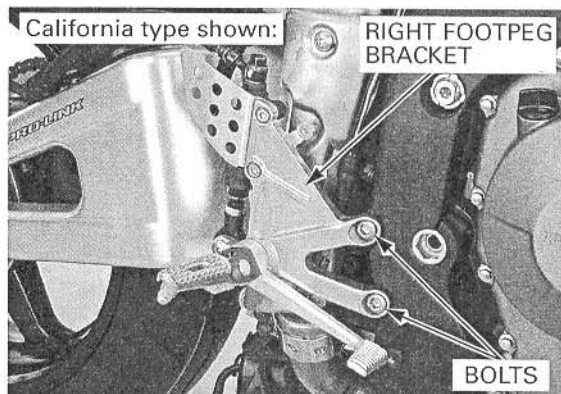

Install the rear brake reservoir tank and tighten the bolt to the specified torque.

**TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)**

