


(1) UPPER MOUNTING BOLT/NUT

**Installation**

Set the shock absorber into the frame and install the upper mounting bolt from the left side. Install the nut.

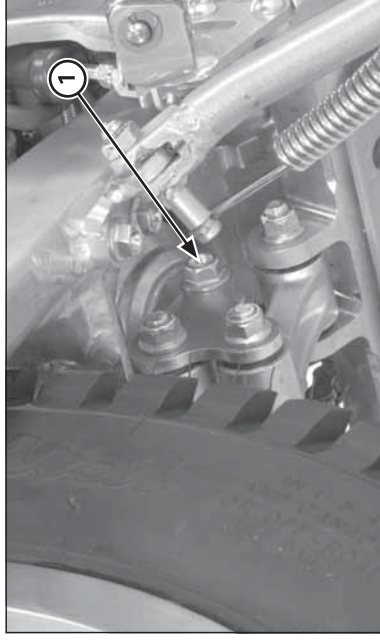

(1) LOWER MOUNTING BOLT/NUT


Move the swingarm aligning the lower mount, then install the lower mounting bolt from the right side.

Install and tighten the upper and lower mounting nuts to the specified torque.

**Torque:**

**Upper mounting bolt:** 39 N·m (4.0 kgf·m, 29 lbf·ft)

**Lower mounting bolt:** 39 N·m (4.0 kgf·m, 29 lbf·ft)

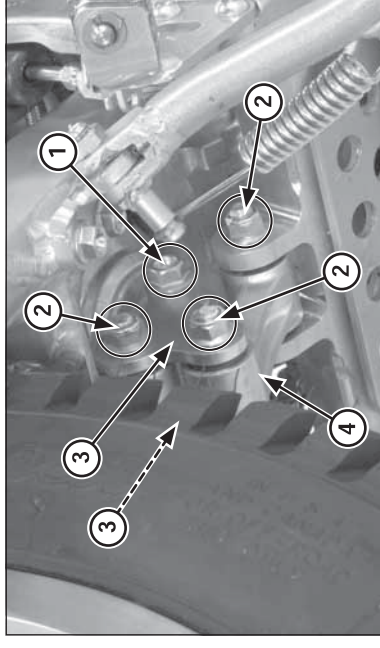

(1) LOWER MOUNTING BOLT/NUT  
 (2) BOLTS/NUTS  
 (3) CUSHION ARM PLATES  
 (4) CUSHION LINK

**Shock Linkage**

**Removal**

Raise the rear wheel off the ground with a block or maintenance stand under the engine.

Remove the following:

- Rear cushion lower mounting bolt/nut
- Cushion arm plate-to-cushion link bolt/nut
- Cushion arm plates-to-swingarm bolt/nut
- Cushion arm plates
- Cushion link-to-frame socket bolt/nut
- Cushion link