


## MAINTENANCE

### EVAPORATIVE EMISSION CONTROL SYSTEM (After '83 : California model only)

Check all hoses to be sure they are securely connected and not kinked. Replace any hose that shows signs of deterioration.

Check the canister for cracks or damage.

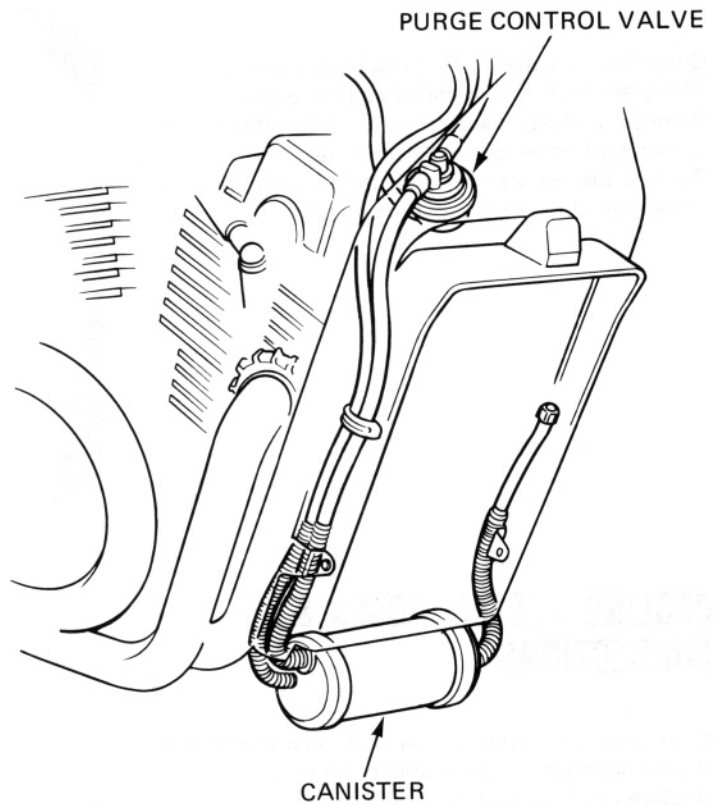

### CARBURETOR PIPING

#### NOTE:

- Be careful not to bend, twist or kink the tubes when installing.
- Slide the end of each tube onto its fitting fully and secure with a tube band. Secure with the tube clamps whenever specified.
- Replace the tubes with new ones if they show signs of deterioration or damage.
- After installing the carburetor on the engine, check that the tubes are not contacting sharp edges or corners.

