

DRIVE TRAIN

Install the rear wheel (page 16-7).

Tighten the axle nut.

TORQUE: 60–80 N·m (6.0–8.0 kg-m, 44–58 ft-lb)


Tighten the three final gear case attaching nuts.

TORQUE: 60–70 N·m (6.0–7.0 kg-m, 43–51 ft-lb)

Tighten the axle pinch bolt.

TORQUE: 20–30 N·m (2.0–3.0 kg-m, 14–22 ft-lb)

Install the left shock absorber (page 16-12).

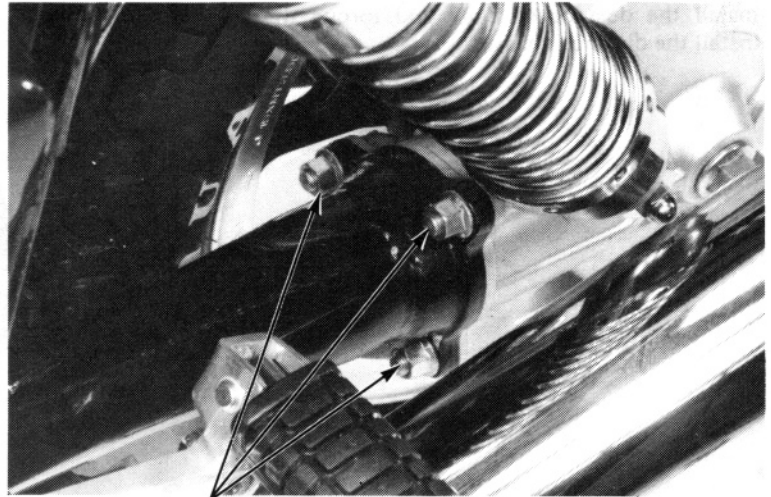

FINAL GEAR CASE
ATTACHING NUTS

REAR AXLE NUT

OIL FILLER CAP

Place the motorcycle on its center stand.

Make sure that the drain bolt is tightened.


Remove the oil filler cap and pour the specified amount of recommended oil up to the filler neck.

RECOMMENDED OIL: HYPOID GEAR OIL

Over 5°C: SAE 90

Below 5°C: SAE 80

OIL CAPACITY: 170 cc (5.8 oz)

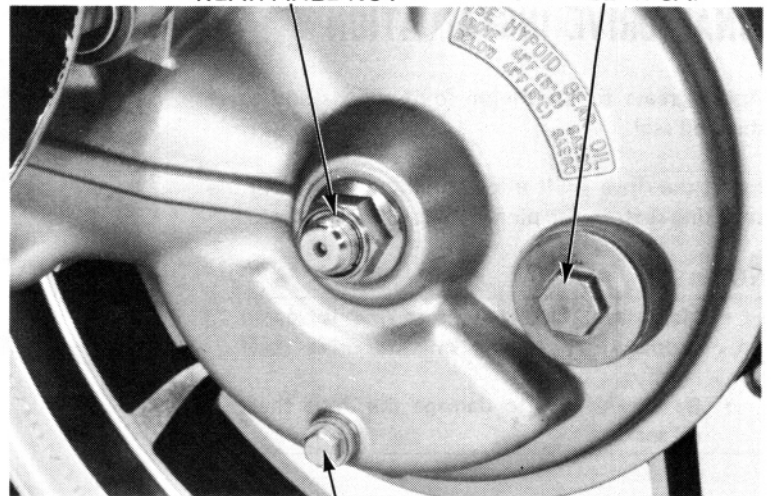

DRAIN BOLT