



INSTALLATION

Apply grease to the throttle grip sliding surface and slide the throttle grip over the handlebar.

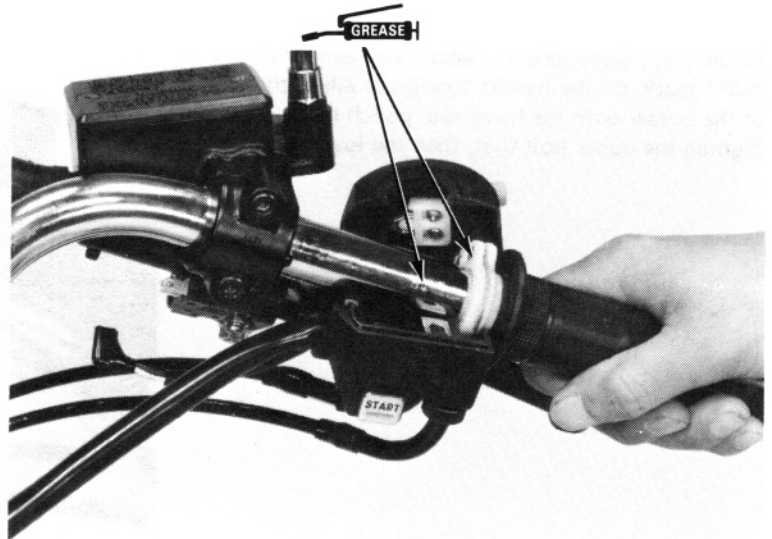

Place the handlebar onto the lower holder aligning the punch mark with the upper face of the lower holder.

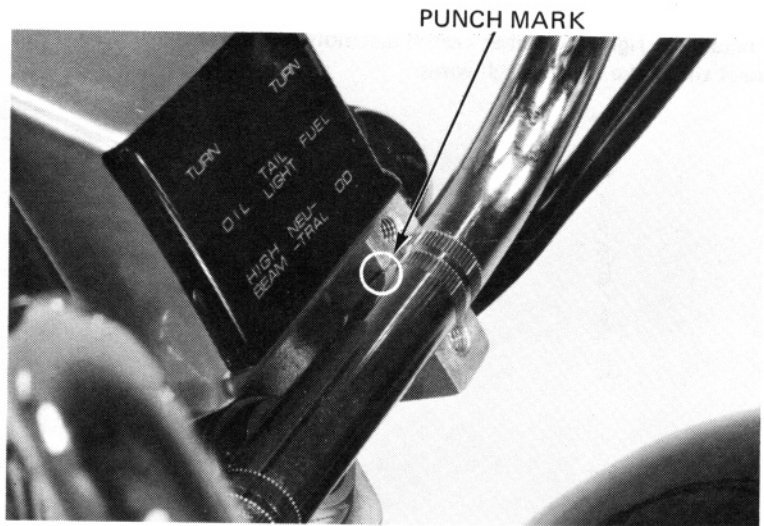

Install the upper holder, tighten the forward bolts first, then tighten the rear bolts.

**TORQUE: 20–30 N·m (2.0–3.0 kg·m, 14–22 ft·lb)**

