



FRONT WHEEL/SUSPENSION

Install the front brake master cylinder with the "UP" mark on the holder facing up. Align the end of the holder with the handlebar punch mark. Tighten the upper bolt first, then the lower bolt.

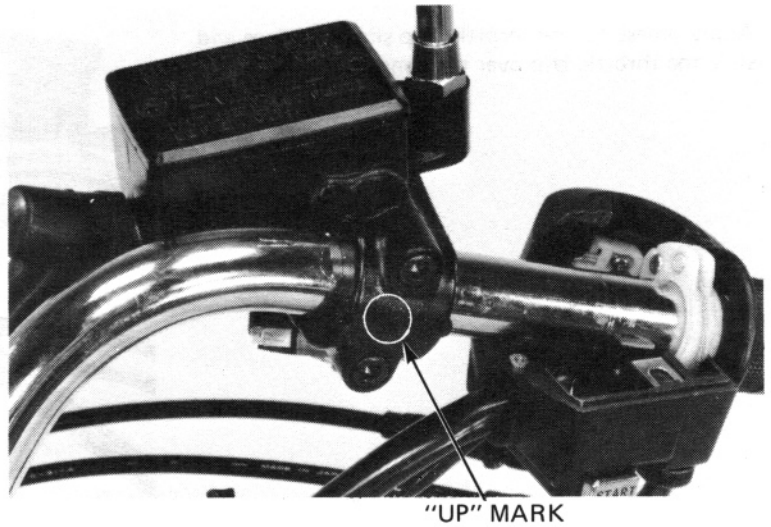

Install the right handlebar switch assembly and connect the brake light switch wires.

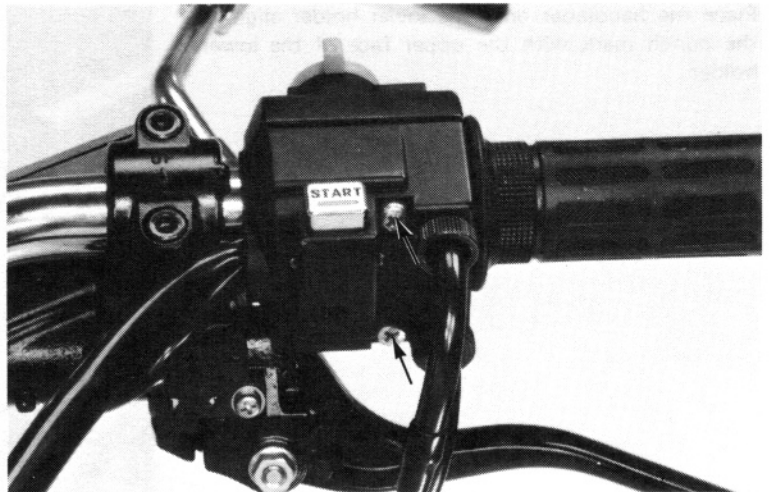

Connect the choke cable to the choke lever and install the clutch master cylinder. Align the end of the holder with the punch mark on the handlebar.

Tighten the upper bolt first, then the lower bolt. Install the left handlebar switch and connect the clutch switch wires.

Route the switch wires properly (page 1-9).

