


HYDRAULIC BRAKE


Install the new pads in the caliper.

Install the pad pins, one pad pin first, then install the other pin by pushing the pads against the caliper to depress the pad spring.

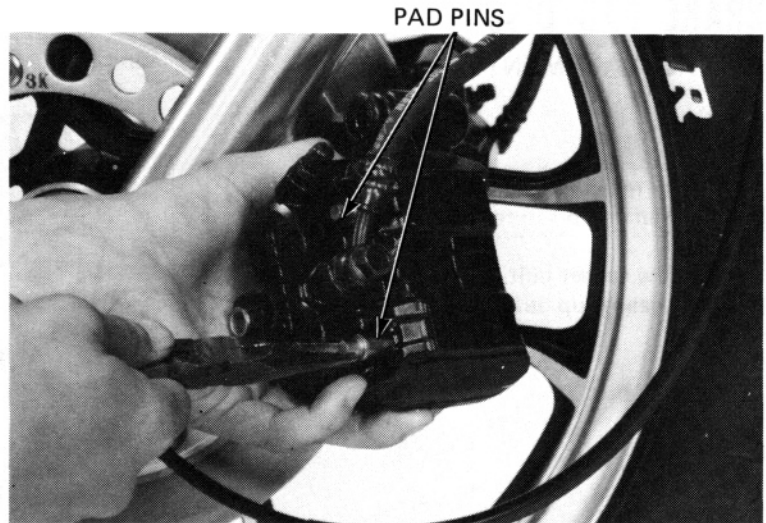

Place the pad pin retainer over the pad pins. Push the retainer down to secure the pins.

Install the pad pin retainer bolt.

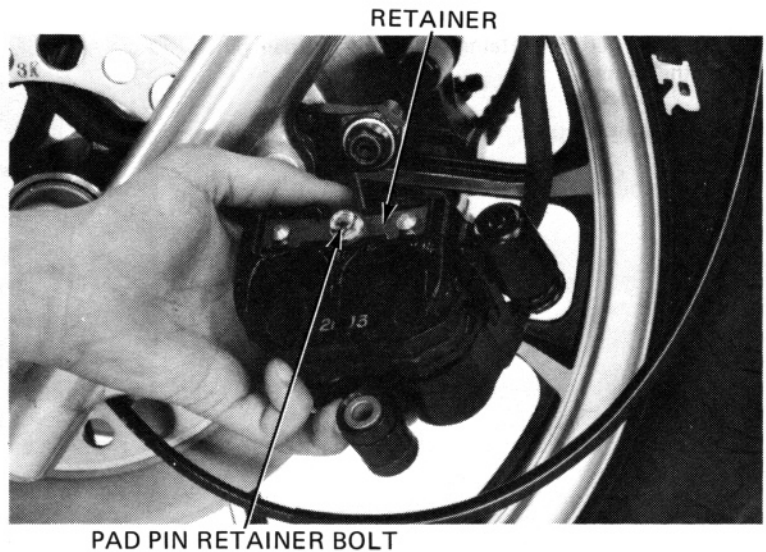

Pivot the caliper down so the brake disc is positioned between the pads, making sure not to damage the pads.

Install the caliper bolt and tighten it.

TORQUE: 18–23 N.m (1.8–2.3 kg-m, 13–17 ft-lb)

