


CAMSHAFT INSTALLATION

Coat the camshaft journals with molybdenum disulfide grease.
Route the camshaft through the cam chain.
Install the cam sprocket on the camshaft with the timing marks facing inside.

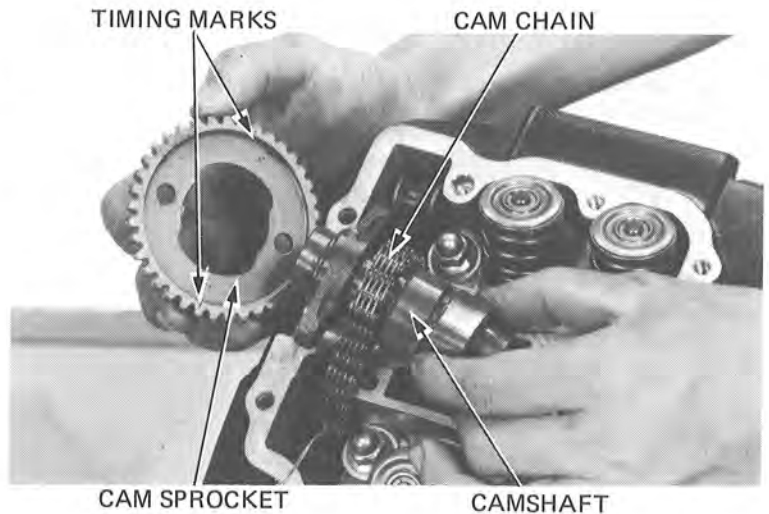

Turn the crankshaft and align the T mark on the generator rotor with the index mark on the left crankcase cover.



Align the timing marks on the cam sprocket with the top of the cylinder head.

