


SHOCK ABSORBER ASSEMBLY

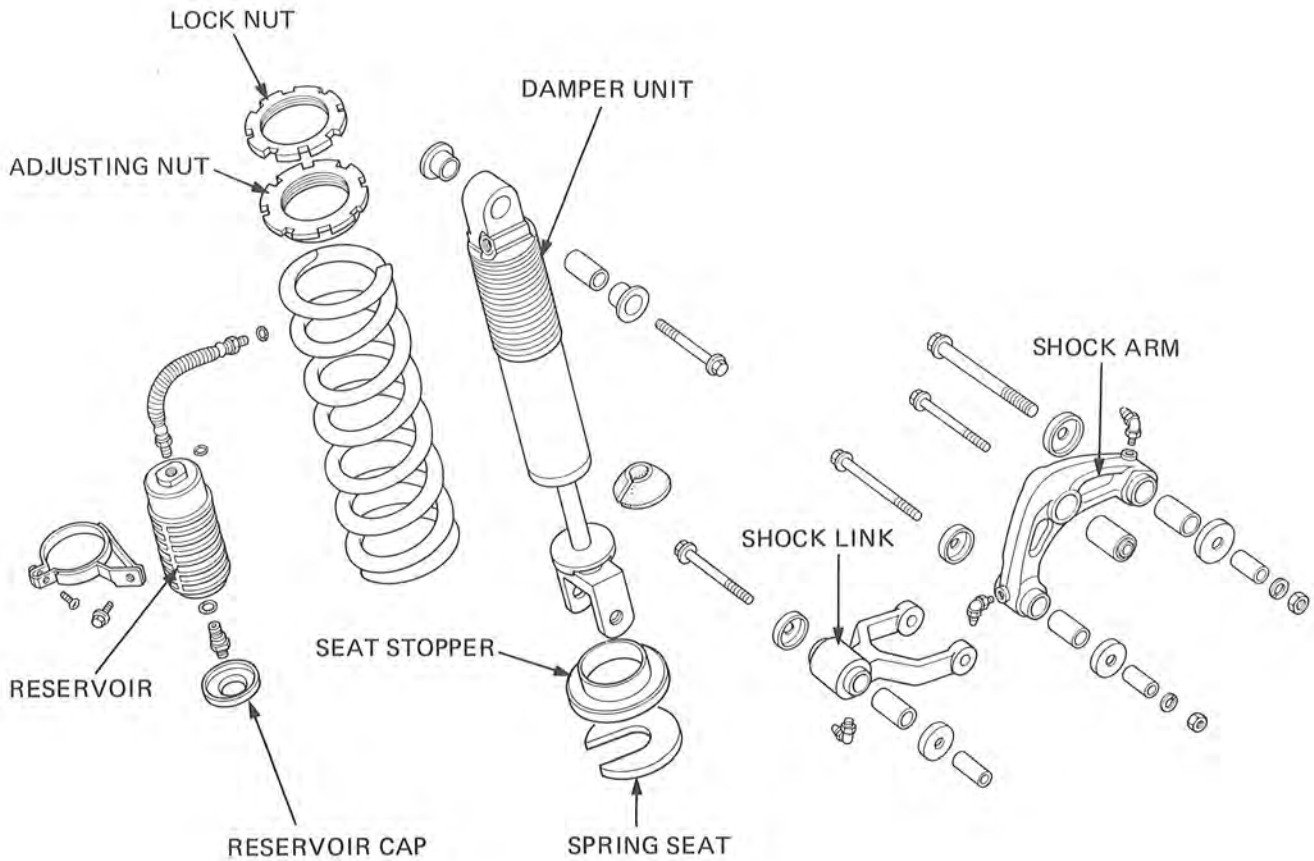

Thread the lock nut and adjusting nut onto the damper unit.

Hold the upper shock mount in a vise with soft jaws or a shop towel with the hole straight up. Pull out the damper rod all the way.

Fill the damper with the recommended oil.

Recommended oil: ATF

