


REVERSE SELECTOR LEVER

Measure the reverse selector lever free play. Free play, measured at the lever end near the cable, should be within 2–4 mm (1/16–1/8 in).

To adjust, loosen the lock nut (1) and turn the adjusting nut (2). Tighten the lock nut securely.

Other Checks:

Check the reverse selector cable and lever for a loose connections, or other damage.

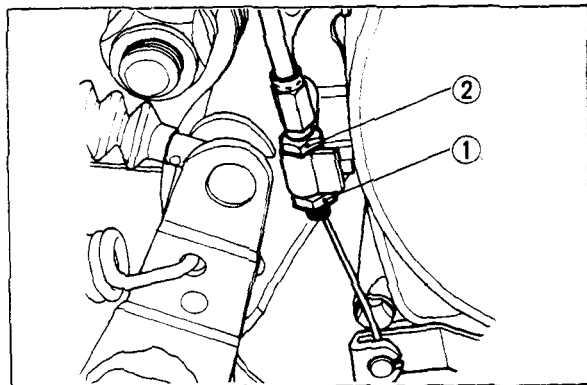

(1) Lock nut

(2) Adjusting nut